

1.2 Removing and installing headlight

Removing




Note

The removal and installation will be demonstrated using the example of the left-hand headlight. The removal and installation of the right headlight follows the same principle.

- Switch off the ignition and all electrical components.
- Remove the front bumper ⇒ General body repairs, exterior; Rep. gr. 63 ; Front bumper .
- Screw -arrows- (because of the different screw lengths, mark the mounting position of the screws).

Headlights installed up to CW 05/2017:

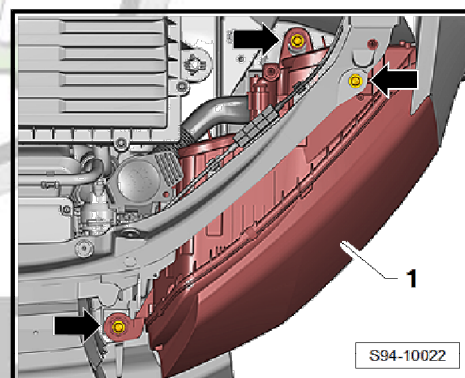

Headlights installed from CW 06/2017:

- Carefully push the headlight -1- towards the front, for this step disconnect the plug.

Installing


Installation is performed in the reverse order; pay attention to the following points:



Caution

If the screws are interchanged, there is a risk of damage to the headlight.


For different length of the mounting screws for headlights, see ⇒ Electronic Catalogue of Original Parts "ETKA".

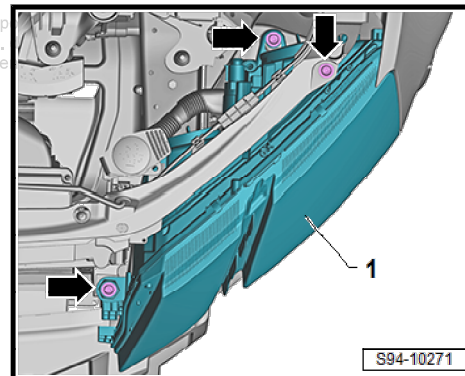

- Align the headlight according to the contours of the vehicle body (maintain the gap size ⇒ Body Repairs; Rep. gr. 00) and loosely tighten with screws.
- Install bumper.
- By turning -arrow- the setting elements -4-, the headlight is moved and thereby fitted to the surrounding body parts.



Headlights installed up to CW 05/2017:

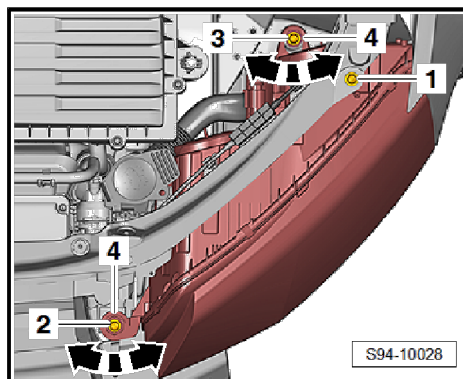

Headlights installed from CW 06/2017:


- Then tighten fixing screws in the -1-, -2- and -3- order.



Note

The setting element is aligned automatically when tightening the screw -1-.

- Set up the headlight
⇒ [“1.3 Setting the headlight beam”, page 78](#) .

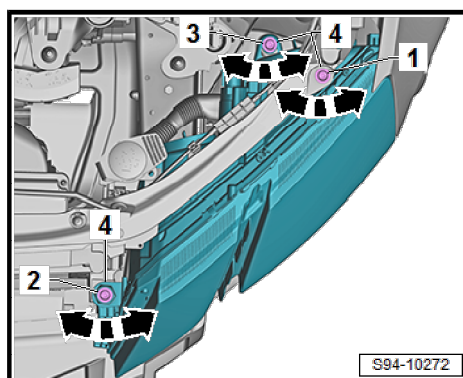

Specified torques

Component	Specified torque
Headlight fixing screws	3.5 Nm

1.3 Setting the headlight beam

Use a headlight beam setting device for setting the headlight beam. Specified values, setting elements, conditions and measurement ⇒ Maintenance ; Booklet Octavia III .

1.4 Removing and installing the front left turn signal bulb -M5- / -M7-

⇒ [“1.4.1 Replacing the PWY24W bulb for turn signal light, halogen and bi-xenon headlights installed up to CW 05/2017”, page 78](#)

⇒ [“1.4.2 Replacing the PWY24W bulb for turn signal light, halogen headlights installed as of CW 06/2017 \(Facelift\)”, page 79](#)

1.4.1 Replacing the PWY24W bulb for turn signal light, halogen and bi-xenon headlights installed up to CW 05/2017



Note

- ♦ A repair kit is supplied for changing the bulb of the turn signal light - including light bulb, O-ring, cap and fixing screws (see ⇒ *Electronic Catalogue of Original Parts “ETKA”*).
- ♦ Do not touch the glass when installing the light bulb. Your fingers will leave traces of grease on the glass which then evaporate when the bulb is switched on causing it to cloud.
- Switch off the ignition and all electrical components.