

## 4 Side windows

⇒ "4.1 Summary of components - Rear side window", page 203

⇒ "4.2 Removing and installing rear side window", page 203

### 4.1 Summary of components - Rear side window

1 - Side section

2 - Guide bolt


- ❑ Is part of the side window. When removing cut through with cutting thread.

3 - Sealing section

- ❑ Is part of the side window.

4 - Side window

5 - Glue sealing material

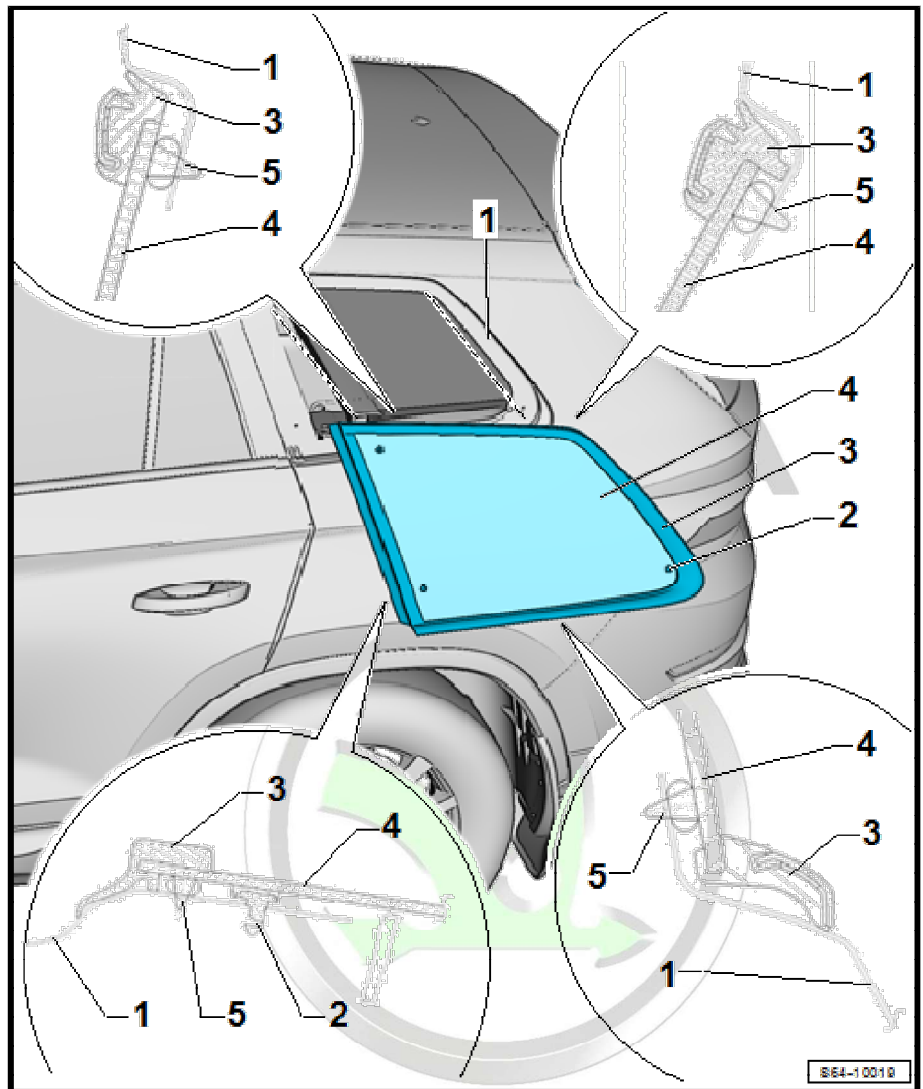

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by ŠKODA AUTO A. S. ŠKODA AUTO A. S. does not guarantee or accept any liability for the accuracy of information in this document. Copyright by ŠKODA AUTO A. S. ©

### 4.2 Removing and installing rear side window

Removing damaged window



#### WARNING

*It is essential to wear protective goggles and gloves when cutting hardened PUR adhesive sealing material and when handling the cutting cord.*

- Protect vehicle interior from glass splinters.
- Remove top C-trim panel ⇒ General body repairs, interior; Rep. gr. 70 ; Interior trim panels; Removing and installing C-