



1.9 Removing and installing the light bulb for the low beam light



WARNING

The H7 light bulb is pressurized and can burst when changing the bulb.

It is recommended to wear gloves and safety glasses when changing bulbs.




Note



- ◆ *Do not touch the glass when installing the light bulb. Your fingers will leave traces of grease on the glass which then evaporate when the bulb is switched on causing it to cloud.*
- ◆ *When installing the cover, pay attention to the correct fitting. Water ingress destroys the headlight.*

Removing

- Remove cap -1-.

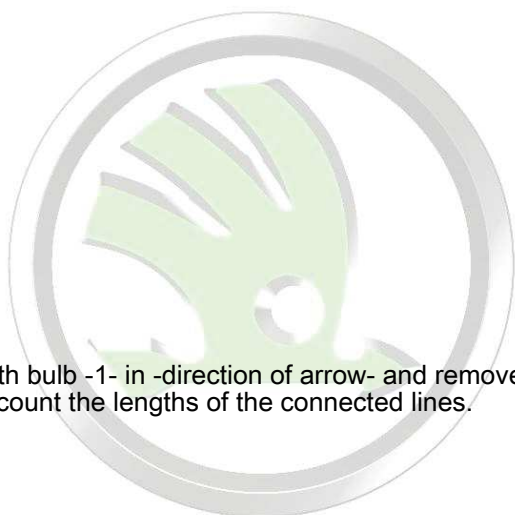

- Turn fitting with bulb -1- in -direction of arrow- and remove, taking into account the lengths of the connected lines.

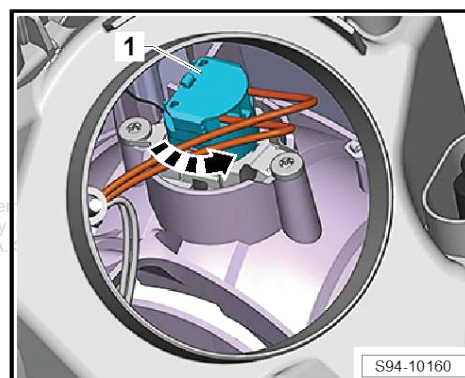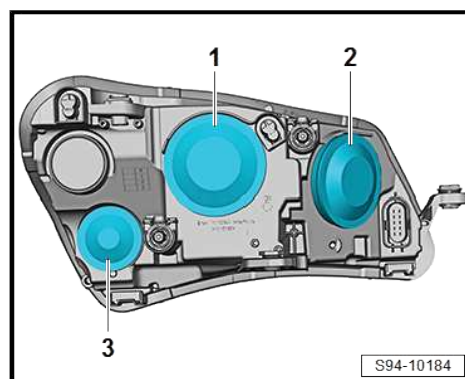

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by ŠKODA AUTO A. S. ŠKODA AUTO A. S. does not guarantee or accept any responsibility with respect to the correctness of information in this document. Copyright by ŠKODA AUTO A. S.