



1 - Door lock

- ☐ The door lock can only be removed together with the assembly carrier.
- ☐ Removing and installing ➔ [page 43](#).

2 - Control cable

- ☐ Serves to release the lock

3 - Mounting bracket

- ☐ Screwed and riveted to the door lock.

4 - Clamp

Removing:

- Door handle, lock cylinder housing and assembly carrier have been removed.
- Screw out the screw (Pos. 5), push the clamp slightly back and remove from the door.

Installing:

- Installation is carried out in the reverse order.

5 - 5 Nm

6 - Door handle

- ☐ Removing and installing ➔ [page 41](#).

7 - Cap



8 - Housing

- ☐ Removing and installing ➔ [page 41](#).

9 - Washer

10 - 2.8 Nm


- ☐ Releasing this screw unlocks the catch of the housing (Pos. 8) and it can then be removed from the clamp (Pos. 4).
- ☐ The screw should not be released without the lock cylinder housing in place. The catch ring could fall inside the door.

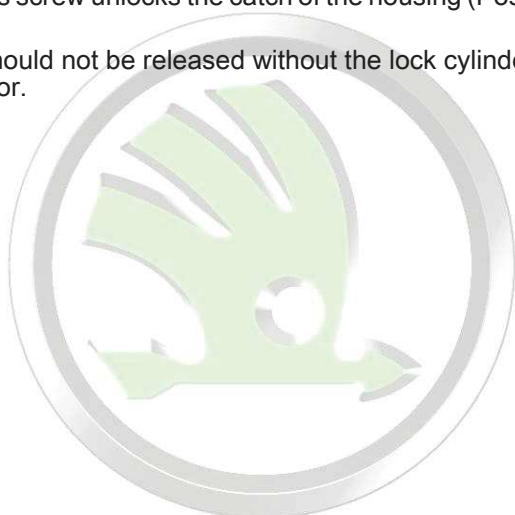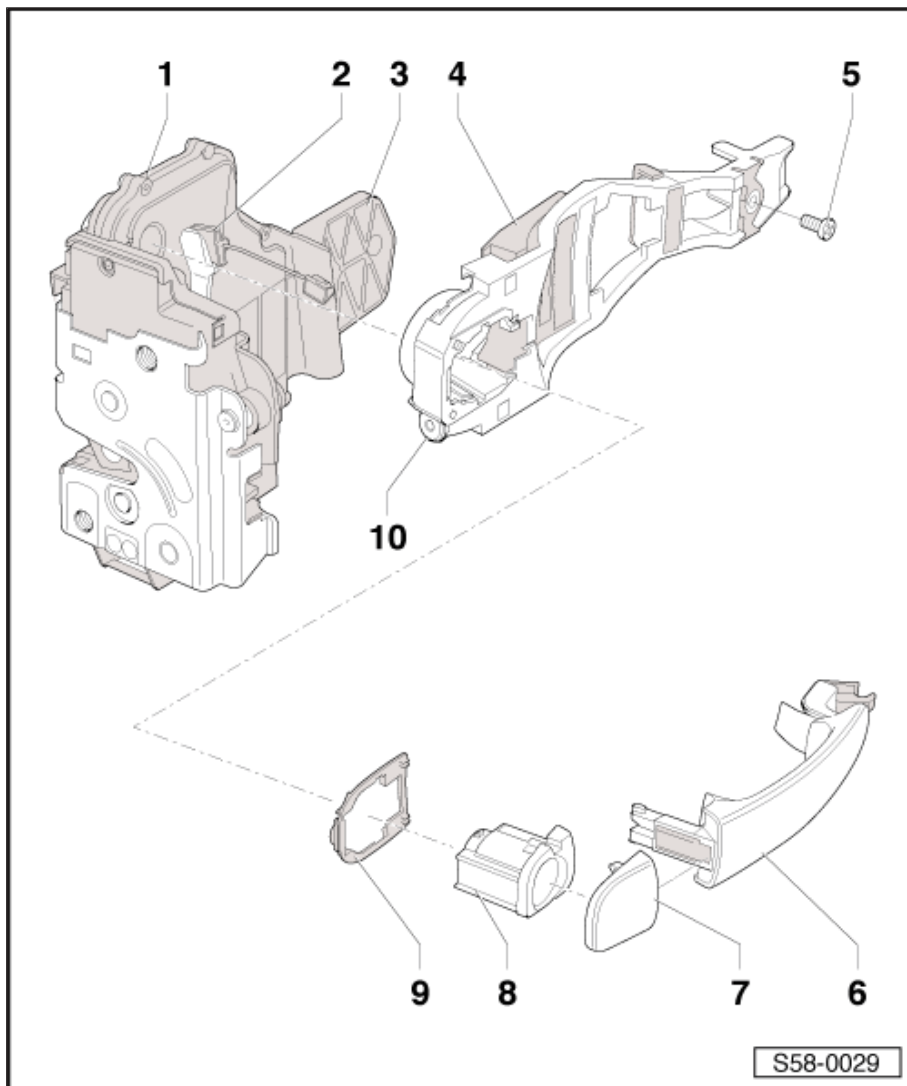

1.8 Removing and installing the door handle housing

Removing:

- Lever off cap -1- with e.g. disassembly wedge - 3409- .

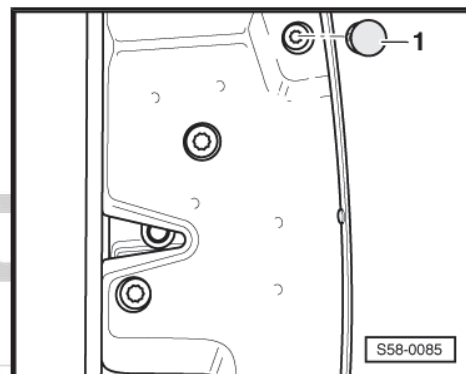


- Pull and hold the door handle -1- in the -direction of the arrow-. Loosen the screw -3- by approximately 3 turns using a screwdriver. The housing -2- is detached.



Note

If the screw is unscrewed too far the catch may separate from the bracket and fall inside the door.

- Pull out housing -2- from the clamp of the door handle at a right angle to the door.

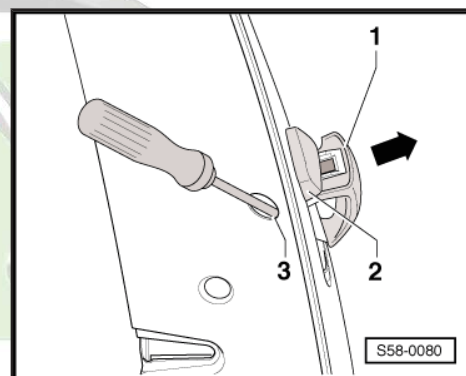

Installing:


- Installation is carried out in the reverse order.

1.9 Removing and installing lock housing - Facelift

Protective Copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by ŠKODA AUTO A. S. ŠKODA AUTO A. S. does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by ŠKODA AUTO A. S. ©

Special tools and workshop equipment required

- ◆ Assembly tool -T10389-

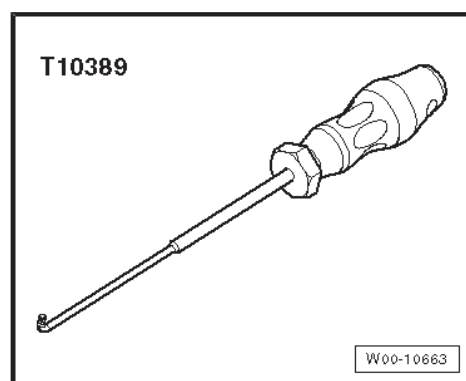


Removing:

- Remove the cap of the opening for the assembly tool - T10389- .




- Insert the assembly tool -T10389- into the opening in the door (according to the figure) approx. 100 mm -dimension A- until it is positioned behind the locking element (Pos. 1).
- Pull the assembly tool in -direction of arrow a- approx. 5 mm.
- In doing so, the locking element is unlocked.
- Slightly open the door handle (Pos. 3) in -direction of arrow c- and hold it.
- Push out the lock housing (Pos. 2) vertically in -direction of arrow b-.

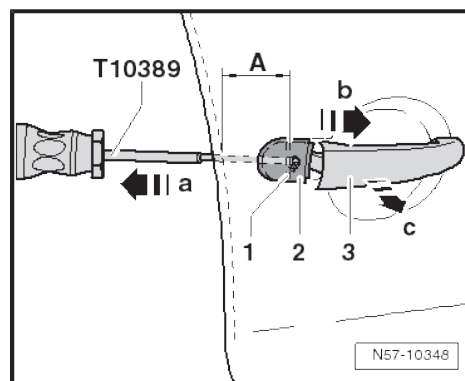

Installing:

- Slightly open the door handle (Pos. 3) in -direction of arrow c- and hold it.
- Push in the lock housing vertically in -direction of arrow b-.
- Press in the locking element, e.g. -T10389- the locking element.
- Clip in the cap of the opening for the assembly tool.

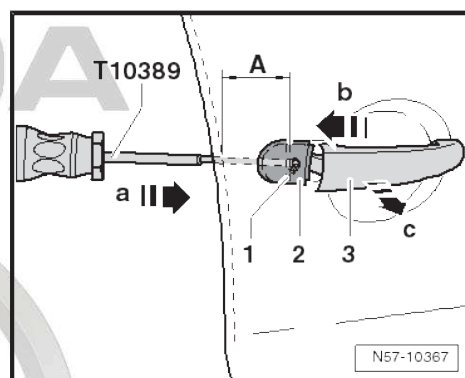

1.10 Removing and installing the door handle


Removing:

- Removing the lock cylinder housing ➤ [page 25](#) .
- Unclip clip -1- from the door handle.
- Swivel door handle out of the door.


Installing:

- Swivel door handle into the door.

Protected by copyright. Copying for private or commercial purposes, in part or in full, is prohibited without the written permission of ŠKODA AUTO A. S. ŠKODA AUTO A. S. does not guarantee the correctness of information in this document. Copyright © 2013 ŠKODA AUTO A. S.

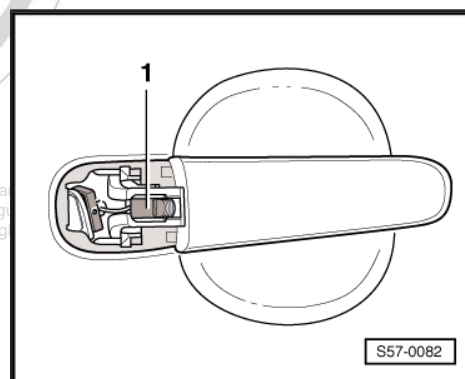

- Hang assembly device -T10118- -Pos. 1- in the spring fixed
-arrow A- to the door lock and hang the spring in the lock lever
-arrow B-.

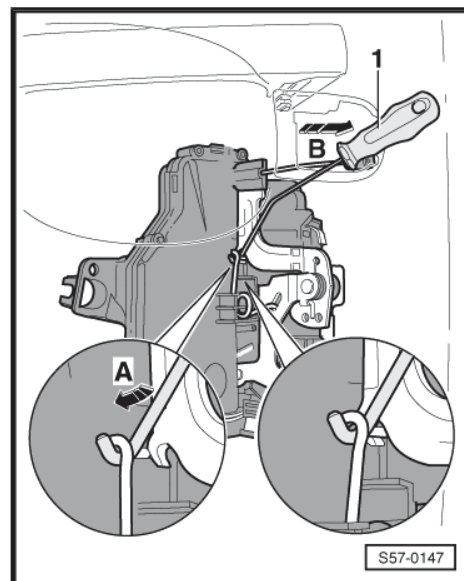


- Draw clip -1- in the plate opening and allow to clip into door handle -2-.



Note

During assembly keep the door handle -2- pressed against the door panel.

- Installing the lock cylinder housing ➔ [page 25](#) .

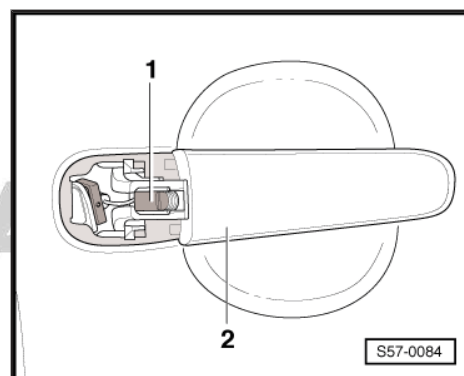

Note

Perform a functional check because the door cannot be opened if the adjustment is not accurate and the Bowden wire is not clipped on correctly.

1.11 Removing and installing the door lock

Removing:

- Remove rear door trim panel ➔ [page 142](#) .
- Remove the protective foil for rear door.
- Removing the door handle ➔ [page 39](#) .
- Remove fixing screws for door lock ➔ [page 34](#) .
- Take out door lock.
- Unhook the control cable of the mechanical door lock (depending upon vehicle equipment).

ŠKODA AUTO A. S. does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by ŠKODA AUTO A. S.



- If necessary unhook control cable -1-.


Installing:

- Installation is carried out in the reverse order.



Note

Perform a functional check because the door cannot be opened if the adjustment is not accurate and the Bowden wire is not clipped on correctly.

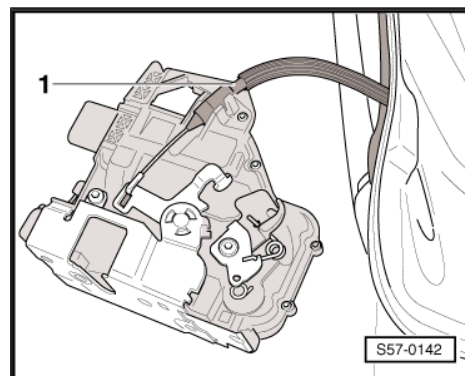

1.12 Summary of components of door seals

1 - Inside door seal

- The joining must be approx. 300 mm from door bottom -A-.

2 - Rear door window

3 - 1 Nm

4 - Outside door seal and window run

Removing:

- Remove bolts -3- and -7-.
- Carefully remove seal gradually from the door so that the metal strut in the inner seal will not be damaged.
- Remove fixed rear door window (Pos. 5) with seal (inserted into sealing section).

Installing:

- Installation is carried out in the reverse order.

5 - Fixed rear door window

6 - Rear door

7 - 4 Nm

8 - Inner channel seal

