

## 1.12 Removing and installing the side light bulb -M1- / -M3-




### Note

The bulb for the side light also serves as the daylight driving light.

### Removing


- Remove headlight  
⇒ "1.2 Removing and installing headlight", page 82 .
- Carefully pry off the cover for turn signal light -1- (e. g. using a screwdriver or a smaller knife). Proceed carefully so that the remainders of the cover do not grip into the headlight housing.

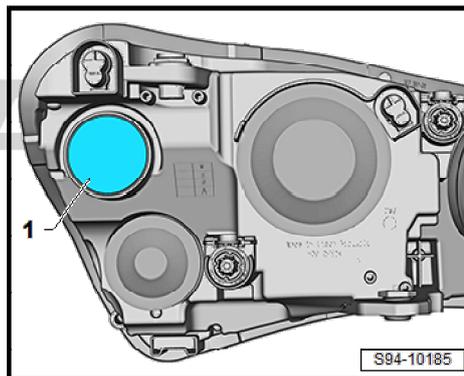

- Turn socket with bulb -1- -arrow- and remove.

### Installing

Installation is carried out in the reverse order. When installing, observe the following:

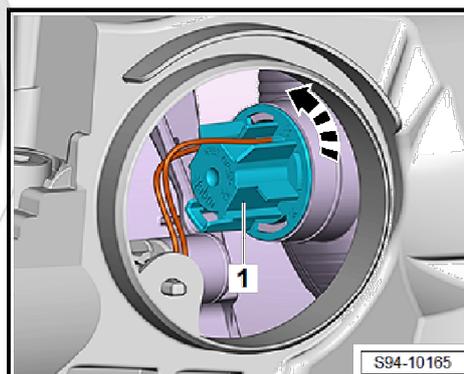

- After removing a new light bulb, seal the headlight opening -1- with the rubber cap from the repair kit, see ⇒ "catalogue of original parts" .

