



1 - B-pillar trim panel

2 - Fixing pins

□ Part of the trim.

3 - Screw


□ Tightening torque - 1.8 Nm.

4 - Foam strip

□ Self-adhesive.

5 - Dowel

6 - Grommet

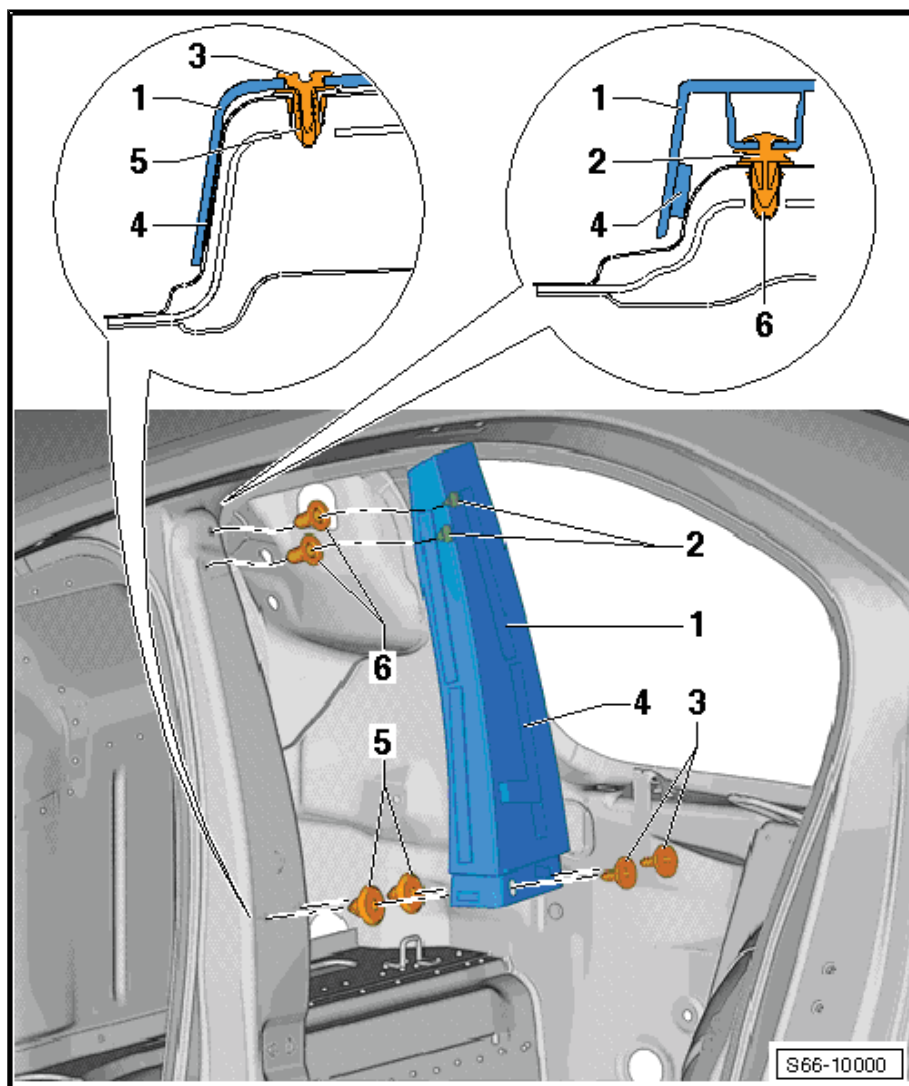

ŠKODA


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by ŠKODA AUTO A. S. ŠKODA AUTO A. S. does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by ŠKODA AUTO A. S.



### 3.4.2 Removing

**Note**

*The trim cannot be removed without being destroyed.*

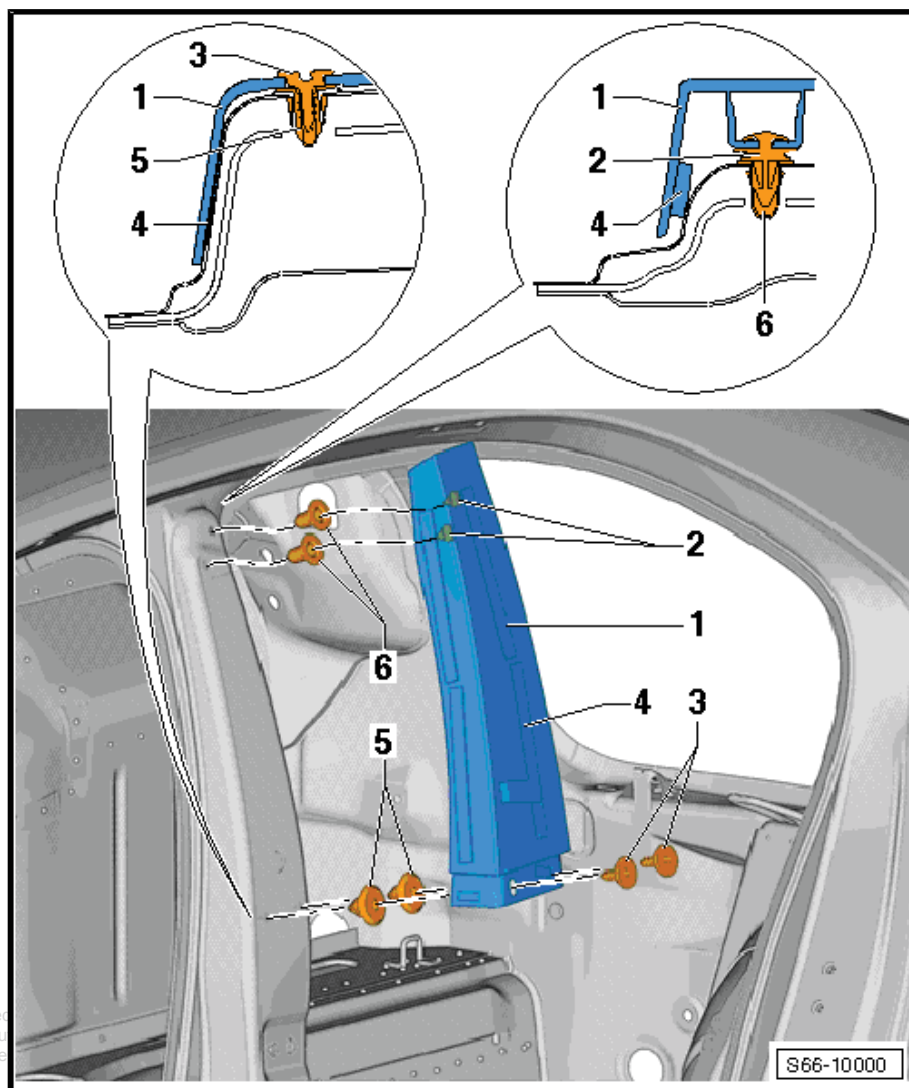**Carry out the following tasks**

- Remove screws -3- (1,8 Nm).
- Lever the fixing pins -2- out of the grommets -6- e.g. using a wedge.
- The fixing pins will probably tear and remain in the grommets -6-.
- Remove the trim -1- from the B pillar.
- Remove residues of torn pins and glue residues from the self-adhesive strips - 4 -.

**Installing**

- The installation occurs in reverse order.