

7 Additional brake light

⇒ [“7.1 Removing and installing high level brake light”, page 167](#)

7.1 Removing and installing high level brake light


⇒ [“7.1.1 Removing and installing the high level brake light - Rapid”, page 167](#)

⇒ [“7.1.2 Removing and installing the high level brake light - Rapid Spaceback”, page 167](#)

7.1.1 Removing and installing the high level brake light - Rapid

Removing


- Switch off the ignition and all electrical consumers!
- Consecutively press the retaining tabs in direction of arrow -A- and detach the cover -2- from the light housing -1- in direction of arrow -B-.

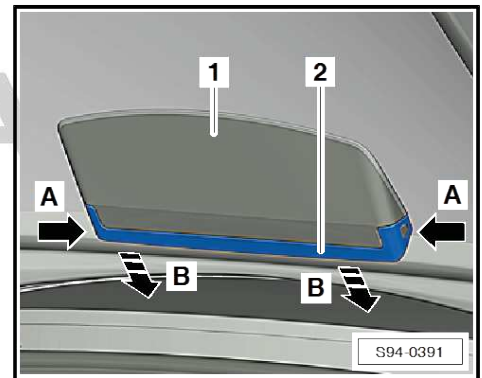

- Pinch the retaining tabs in the direction of arrow -A- and pull the brake light -1- in the direction of arrow -B- out of the support.
- Separate electrical plug connection -2-.

Installing

Installation is carried out in the reverse order.

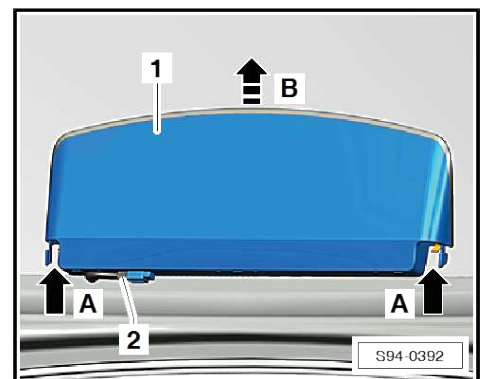

Note

The light strip is fitted with LEDs, which cannot be replaced individually. In the event of a fault, the brake light must be replaced completely.

unless authorised by ŠKODA AUTO A. S. ŠKODA AUTO A. S. does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by ŠKODA AUTO A. S. ©

7.1.2 Removing and installing the high level brake light - Rapid Spaceback



Caution

When using the lever tool, mask points where the lever tool is applied using commercially available adhesive tape.

Special tools and workshop equipment required

- ◆ Disassembly wedge - T10383- , if necessary, plastic spatula