



- Use the release tool - T30111- Pos. -3- or a small screwdriver to raise the bottom securing tabs -1- in direction of arrow -A- and simultaneously press out the bottom side of the vent from the assembly opening in direction of arrow -B- at the bottom reinforcement.
- Next, press the vents -2- backwards slightly, carefully release them from the top securing tabs and remove them.
- Disconnect the plug connection.
- If necessary, remove the switches of the vents and the airbag off warning light ➔ Electrical System; Rep. gr. 96 ; Controls; Removing and installing front passenger side airbag warning light - K145- .


Installing

Installation is carried out in the reverse order. When installing, observe the following:



Caution

Do not press onto the grids of the vent when installing.

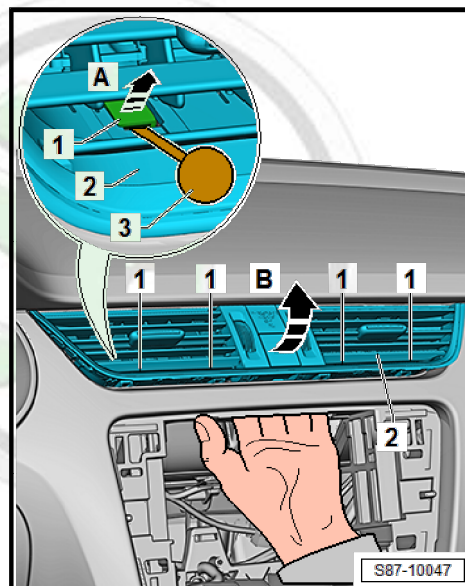

- Carefully push the vent back into the dash panel until the catches lock audibly into place.
- Press the vents into the dash panel at the bottom reinforcement.
- After installing, check the vents for proper operation.

6.2 Removing and installing the right/left side vent

Special tools and workshop equipment required

- ◆ Assembly tool - T10389-
- ◆ Release tool - T30111-

Removing

- Open all the fins of the vent.
- Insert the release tool -4- into the vent and hook it at the rear bottom edge of the vent arrow -B- (use a lamp to insert the release tool correctly).
- Using unlocking tool - T30111- Pos. -3- lift off the locking lugs -1- in the direction of the arrow -A-.
- Carefully loosen the vent -2- by pulling on the release tool in direction of arrow -C- and remove it from the dash panel.

Installing



Caution

Do not press onto the grids of the vent when installing.

- Carefully push the vent back into the dash panel until the catches lock audibly into place.
- After installing, check the vents for proper operation.

