

## 10 Loudspeaker arrangement

⇒ [“10.1 Removing and installing the front and rear bass speaker”](#),  
[page 57](#)

⇒ [“10.2 Removing and installing the front treble speaker”](#),  
[page 57](#)

⇒ [“10.3 Removing and installing the rear treble speaker”](#),  
[page 57](#)

### 10.1 Removing and installing the front and rear bass speaker

Full-range speaker are assembled in India. The work procedure is the same for the installation work.

#### Removing

- Switch off the ignition and all electrical consumers!
- Remove the door trim panel from which the loudspeaker is removed ⇒ Body Work; Rep. gr. 70 .
- Disconnect socket connector at the loudspeaker.
- Use a suitable drill to drill open the four rivets -arrows- and take out the faulty speaker.


#### Note

- ◆ *It is important to remove all the drill swarf from the door since it can otherwise lead to corrosion.*
- ◆ *Any damage to the paintwork which is caused by drilling out the rivets must be repaired immediately by a specialist.*

#### Installing

Installation is performed in the reverse order; pay attention to the following points:

- Attach the new speaker with matching blind rivets.

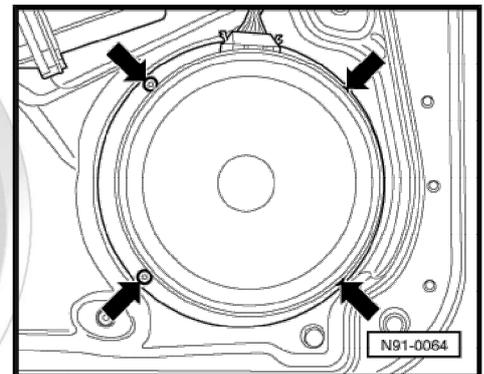

### 10.2 Removing and installing the front treble speaker

The front treble speakers are firmly connected with the pillar A top trim panel.

#### Removing

- Switch off radio.
- Remove trim panel at top of pillar A ⇒ Body Work; Rep. gr. 70 .
- Disconnect socket connector at the loudspeaker.

#### Installing

Installation is carried out in the reverse order.

### 10.3 Removing and installing the rear treble speaker

#### Removing


- Switch off the ignition and all electrical consumers!



- Remove the rear door paneling ⇒ Body Work; Rep. gr. 70 .
- Disconnect socket connector at the loudspeaker.
- Press the catch pegs -arrows- outwards and remove the treble loudspeaker inwards.

### Installing

Installation is carried out in the reverse order.

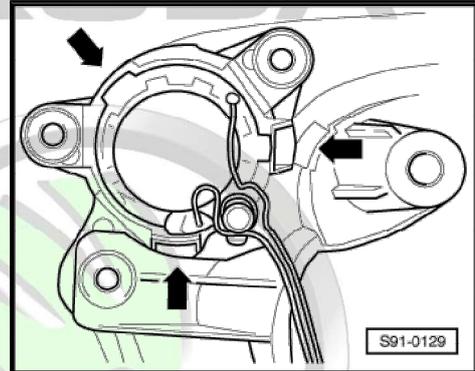

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by ŠKODA AUTO A. S. ŠKODA AUTO A. S. does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by ŠKODA AUTO A. S. ©