

### 1.13 Removing and installing daytime driving light bulb -L174- / -L175-

The Daylight driving light bulb is together with the side light bulb ⇒ ["1.12 Removing and installing the side light bulb M1 / M3"](#), page 92 .

### 1.14 Removing and installing the control unit for a gas discharge lamp -J343- / -J344-

#### Removing


- Unscrew the screws -arrows- and remove the control unit -1-.
- Release connector and pull it off.

#### Installing

Installation is carried out in the reverse order. When installing, observe the following:

 **Note**

*Correctly install the seal when installing the control unit. Water ingress destroys the headlight.*

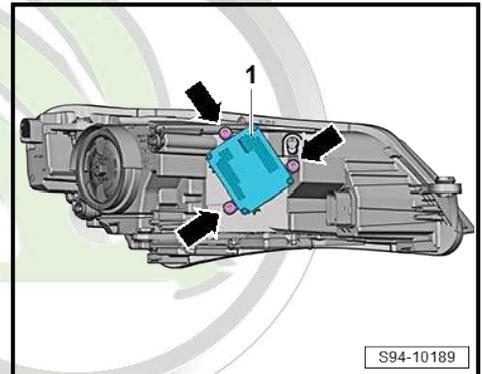

#### Tightening torques

Component	Tightening torque
Fixing screws for control unit	1.4 Nm

### 1.15 Removing and installing the performance module for the headlight -J667- / -J668-

#### Removing


- Remove headlight ⇒ ["1.2 Removing and installing headlight"](#), page 82 .
- Unscrew the screws -arrows- and remove the control unit -1-.
- Release connector and pull it off.

#### Installing

Installation is carried out in the reverse order. When installing, observe the following:

 **Note**

*Correctly install the seal when installing the control unit. Water ingress destroys the headlight.*

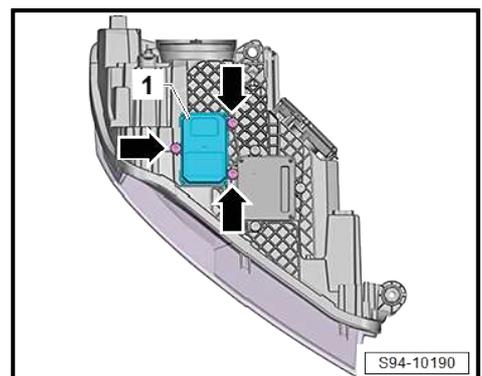

- If the performance module was replaced, then the coding must be carried out with ⇒ Vehicle diagnostic tester and the headlights need adjusting ⇒ ["1.3 Setting the headlight beam"](#), page 82 .

#### Tightening torques

Component	Tightening torque
Fixing screws for control unit	1.4 Nm