



- Remove cap -1-.

Headlight type - variable front lighting:

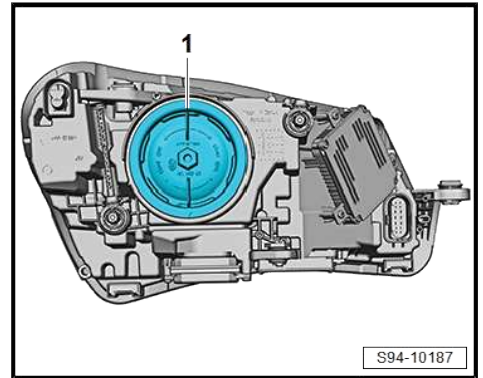


- Press the peg at the plug for unlocking and remove the plug -3- towards the bottom.
- Unlock wire strap -2- by fitting together and raising it and remove the gas discharge lamp -1-.

Headlight type - dynamic main beam control:

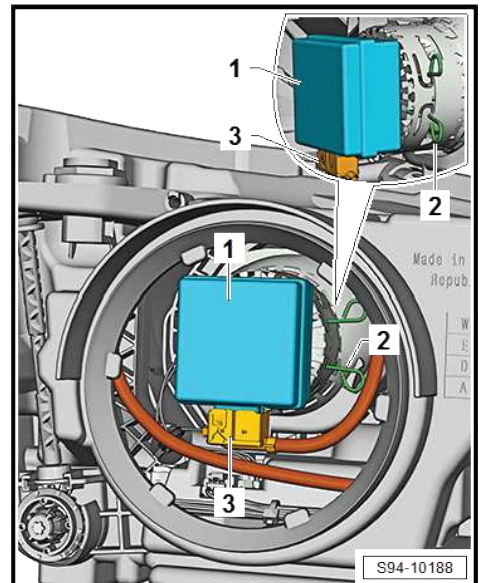

- To unlock, press the peg -2- on the plug -1- and disconnect the plug towards the bottom.
- Turn gas discharge lamp with ignition unit -3- by approx. 45° -arrow- and remove from the headlight housing.

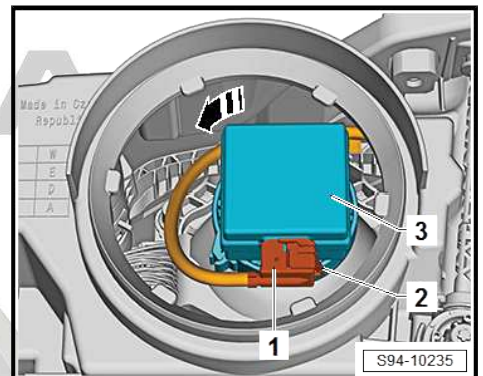


- Press the catch -arrow-, open the socket -1- and take out the gas discharge lamp.

Installing

Installation is carried out in the reverse order. When installing, observe the following:

- Follow the work procedure when connecting the battery
⇒ ["1.3.2 Reconnecting battery", page 9](#).
- Inspecting the headlight beam setting ⇒ Maintenance ; Booklet Superb III .
- Perform basic adjustment of headlight range control⇒ Vehicle diagnostic tester.

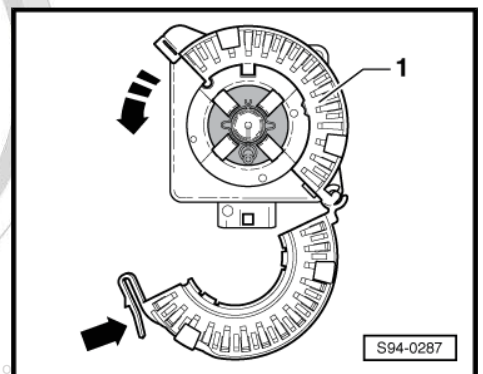

ŠKODA AUTO A. S. ŠKODA AUTO A. S. does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by ŠKODA AUTO A. S. ©