



1.11 Removing and installing gas discharge lamp -L13- / -L14-



WARNING

Mortal high voltage, risk of injury and risk of pollution.

Observe the use and safety instructions for the gas discharge lamps in the Workshop Manual "Electrical System - general notes" → Electrical System - general notes; Rep. gr. 94 Section "94". If a note cannot be accessed, open the Workshop Manual "Electrical System - General Notes" manually in "ELSA".




Note

- ◆ Do not touch the glass bulb when installing. Your fingers will leave traces of grease on the glass bulb, which then evaporate when the gas discharge lamp is switched on causing the glass bulb to cloud.
- ◆ Pay attention to the correct fitting and undamaged seals on the plastic covers as well as the correct positioning of the cover. Water ingress destroys the headlight.

Removing

- Disconnect battery earth strap
⇒ ["1.3 Disconnecting and reconnecting battery", page 9](#).
- Remove cover -1-.

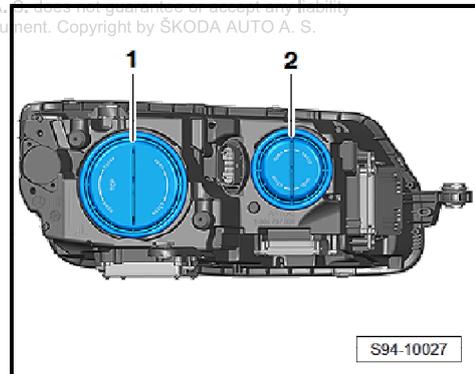

- Press the peg at the plug for unlocking and remove the plug -2- towards the bottom.
- Turn gas discharge lamp -1- by approx. 45° -arrow- and remove from the headlight housing.

Installing

Installation is performed in the reverse order; pay attention to the following points:

- Follow the work procedure when connecting the battery
⇒ ["1.3 Disconnecting and reconnecting battery", page 9](#).
- Inspecting the headlight beam setting ⇒ Maintenance ; Booklet Octavia III .
- Undertake the basic setting for beam range regulation ⇒ Vehicle diagnostic tester.

