



## 96 – Lights, bulbs, switches - interior

### 1 Interior lights and warning light for front passenger airbag deactivation

⇒ “1.1 Removing and installing the front interior light”, page 110

⇒ “1.2 Removing and installing the rear interior light - version I”, page 111

⇒ “1.3 Removing and installing the rear interior light - version II”, page 111

⇒ “1.4 Removing and installing glove box light”, page 111

⇒ “1.5 Removing and installing luggage compartment light”, page 111

⇒ “1.6 Removing and installing the warning light for front passenger airbag switch-off function”, page 112

#### 1.1 Removing and installing the front interior light




##### Note

*The work procedure for removal and installation on vehicles with electrically operated sliding roof is identical.*

##### Removing

- Switch off the ignition and all electrical consumers!
- Carefully lower light scattering cover -arrow- and remove.

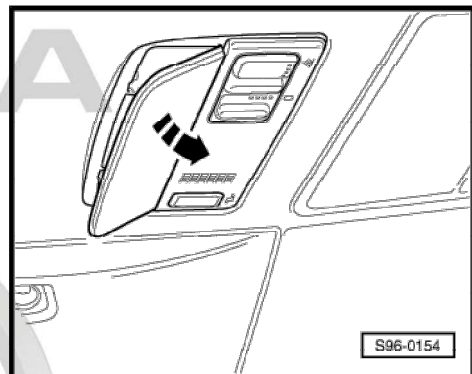

- Remove the both screws -1- (2 Nm).
- Remove the interior light downwards and disconnect the connectors.




##### Note

*It is necessary to not remove the interior light to replace the light bulb.*

- Light bulb -2- without base W5W.

- Light bulb -3- Soffitte C10W.

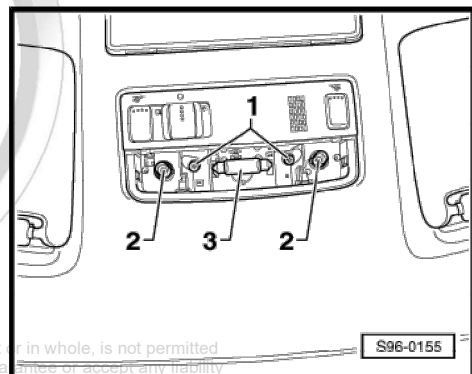

##### Installing

Installation is carried out in the reverse order.


## 1.2 Removing and installing the rear interior light - version I

The work sequence is the same as for the front interior light, the tightening torque of the fixing screws is lower (1 Nm)  
⇒ [page 110](#) .

## 1.3 Removing and installing the rear interior light - version II

### Removing


- Carefully lever out the interior light -1- from the opening in the moulded headliner -arrow- using the removal wedge - 3409- .
- Disconnect the plug connection.

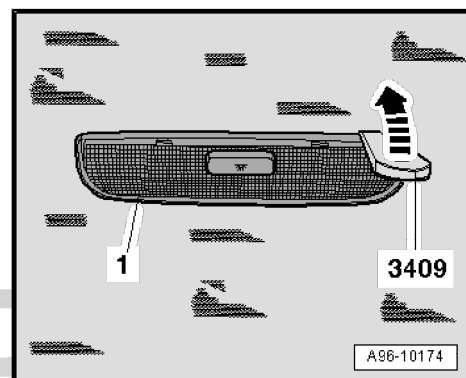

- Remove the light bulb -1- if necessary -2- (Soffitte C6W or C5W) from the clamping sleeve and replace it.

### Installing

- Mount the plug and clip the lamp back into the assembly opening.

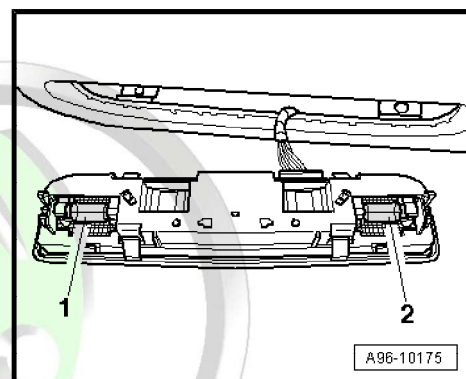


## 1.4 Removing and installing glove box light

### Removing

- Switch off the ignition and all electrical consumers!
- Place a cross-head screwdriver under the light scattering cover -arrow- and carefully lever out the lamp.
- Disconnect the plug connection.
- Remove the light bulb W5W and replace it.

### Installing

Installation is carried out in the reverse order.

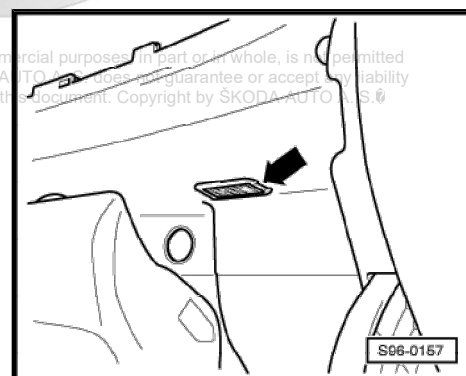

## 1.5 Removing and installing luggage compartment light


### Removing

- Switch off the ignition and all electrical consumers!



- Place a cross-head screwdriver under the lens and carefully lever out the light.

Hatchback

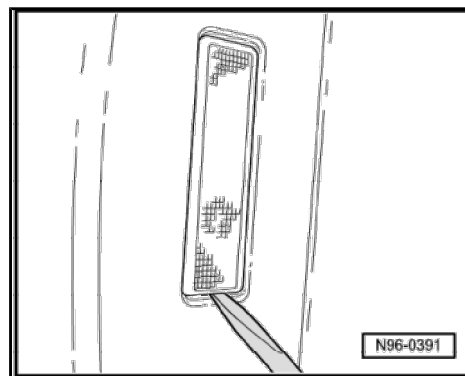


Combi

- Disconnect the plug connection.
- Remove the light bulb W5W and replace it.

#### Installing

Installation is carried out in the reverse order.

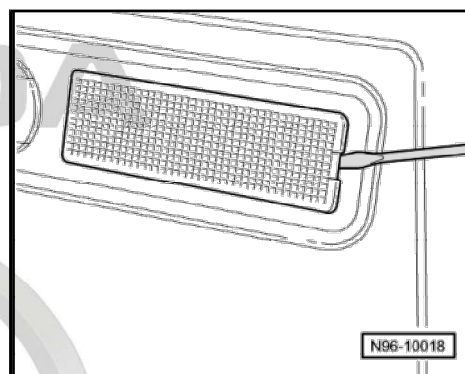

## 1.6 Removing and installing the warning light for front passenger airbag switch-off function

#### Removing

- Switch off the ignition and all electrical consumers!
- Remove centre vent -1- ➔ Heating, Air Conditioning; Rep. gr. 80 .
- Disconnect the plug from the warning light -3- for front passenger airbag deactivation.
- Press warning light -3- from centre ventilation blower to the outside -arrow-.

#### Installing

Installation is carried out in the reverse order.

