

Description of function and types of headlights to be fitted:

- ⇒ Owner's manual Octavia III
- ⇒ Self-study programme No. 97 ; Škoda Octavia III; Introduction to the vehicle
- ⇒ Current flow diagrams, Electrical fault finding and Fitting locations

1 - Headlight housing

- ☐ Removing and installing
⇒ ["1.2 Removing and installing headlight", page 77](#)
- ☐ Adjust
⇒ ["1.3 Setting the headlight beam", page 78](#)

2 - Bulb for main beam, daytime running light and side light

- ☐ 12 V, 55 W (H15)
- ☐ Replace
⇒ ["1.10.1 Replacing the multifunction bulb H15 \(for main beam light, daytime running light, side light\), headlights installed up to 05/2017", page 90](#)

3 - Cover

4 - Headlight range control motor

- ☐ Removing and installing
⇒ ["1.8.1 Removing and installing the control motor for headlamp range control, halogen heads", page 86](#)

5 - Light bulb for low beam light

- ☐ 12 V, 55 W (H7)
- ☐ Replace
⇒ ["1.9.1 Replacing H7LL bulb for low beam light, halogen headlights", page 89](#)

6 - Cover

7 - Bolts


- ☐ 1.5 Nm

8 - Cover

9 - O-ring

10 - Light bulb for the turn signal light

- ☐ PWY24W
- ☐ Replace
⇒ ["1.4.1 Replacing the PWY24W bulb for turn signal light, halogen and bi-xenon headlights installed up to CW 05/2017", page 78](#)

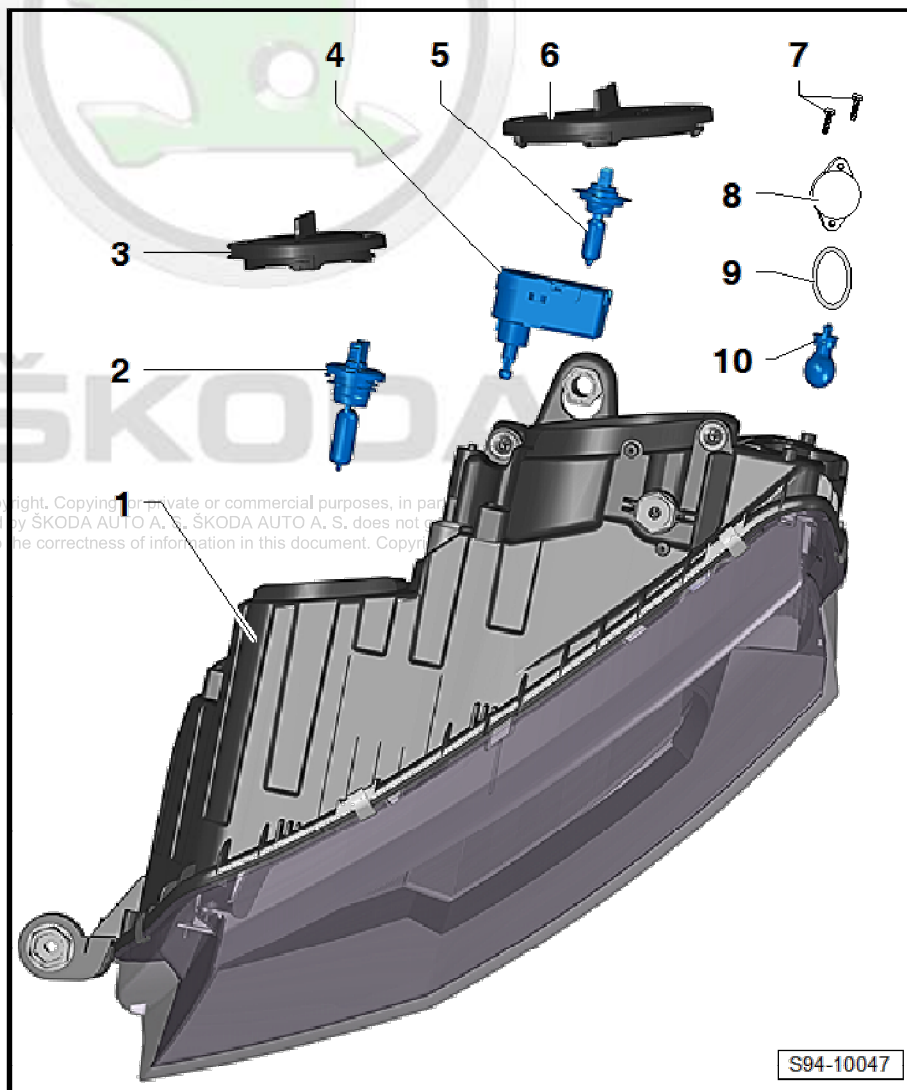

**Note**

The headlight wiring loom spare part is only used as a source for spare parts (e.g. connector, fitting etc.). It therefore cannot be replaced completely in the headlight.

1.1.2 Assembly overview - halogen headlights as of CW 06.2017 (facelift)

Description of function and types of headlights to be fitted:

⇒ Owner's manual Octavia III

⇒ Current flow diagrams, Electrical fault finding and Fitting locations

1 - Screw

- ❑ 3.5 Nm

2 - hollow bolt

- ❑ Adjusting element for exact position adjustment of the headlight in the body

3 - Headlight housing

- ❑ Removing and installing
⇒ ["1.2 Removing and installing headlight", page 77](#)
- ❑ Adjust
⇒ ["1.3 Setting the headlight beam", page 78](#)

4 - Light bulb for the turn signal light

- ❑ PWY24W
- ❑ Replace
⇒ ["1.4.2 Replacing the PWY24W bulb for turn signal light, halogen headlights installed as of CW 06/2017 \(Facelift\)", page 79](#)

5 - Light bulb for main beam

- ❑ H7
- ❑ Replace
⇒ ["1.10.2 Replacing bulb for the main beam, headlights installed from CW 06/2017", page 91](#)

6 - Cover


7 - LED module for daytime running light and side light

- ❑ for daytime running light and side light function
- ❑ Removing and installing
⇒ ["1.13 Removing and installing LED module for daytime and parking lights, halogen headlights from week 06.2017 \(Facelift\)", page 95](#)

8 - Cover

9 - Light bulb for low beam light

- ❑ H7 LL

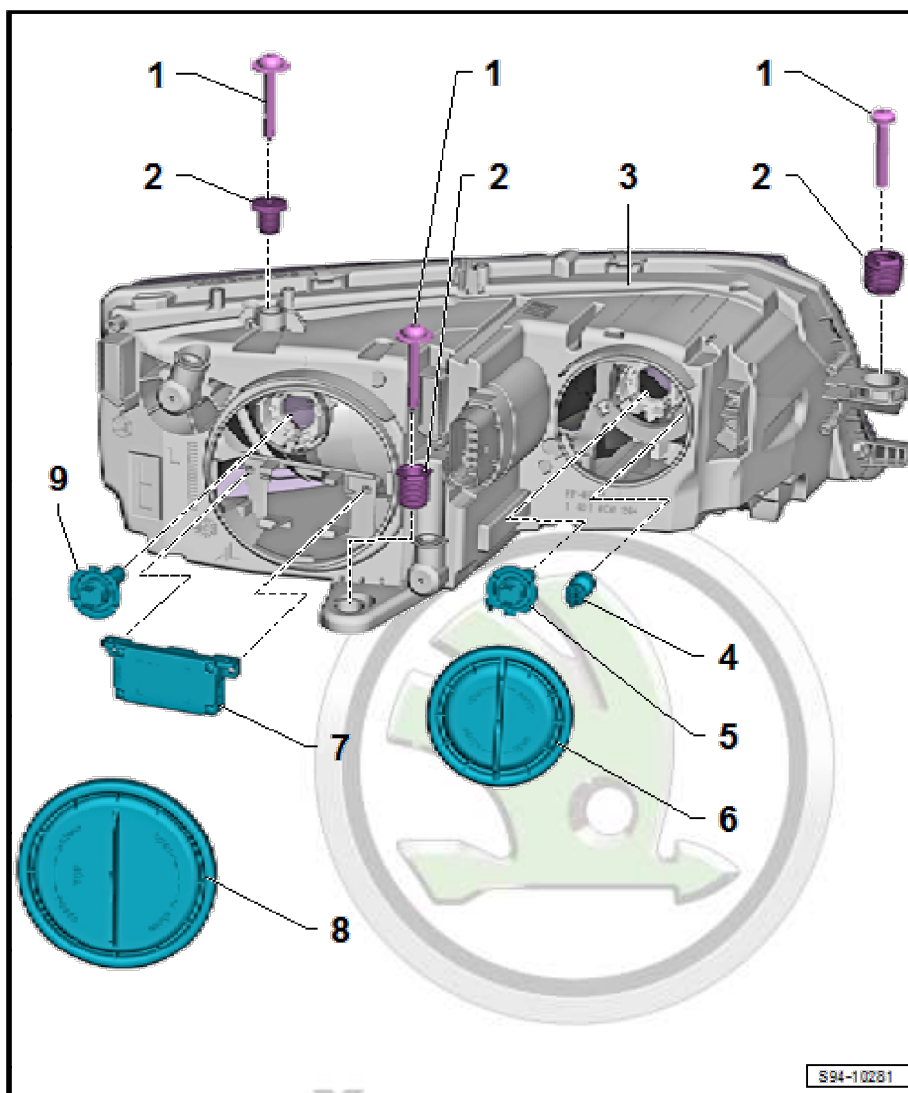

ŠKODA
ŠKODA AUTO A. S. ŠKODA AUTO A. S. does not guarantee or accept any liability unless authorised by ŠKODA AUTO A. S. with respect to the correctness of information in this document. Copyright by ŠKODA AUTO A. S.

- ❑ Replace ➔ [“1.9.1 Replacing H7LL bulb for low beam light, halogen headlights”, page 89](#)

1.1.3 Assembly overview – Bi-xenon headlights

1 - Control unit for gas discharge lamp - J343- left or - J344- right

- ❑ Removing and installing
➔ [“1.14 Removing and installing the control unit for a gas discharge lamp J343 / J344 ”, page 95](#)

2 - Headlight housing

- ❑ Removing and installing is the same as for the halogen headlight
➔ [“1.2 Removing and installing headlight”, page 77](#)
- ❑ Adjustment

3 - Bulb for side light and daytime running light

- ❑ 12 V, 21/5 W (P21/5W)
- ❑ Replace
➔ [“1.12.1 Replacing bulb for side light and daytime running light P21/5W, halogen headlights”, page 93](#)

4 - Cover

5 - Headlight range control motor

- ❑ Removing and installing
➔ [“1.8.2 Removing and installing the control motor for headlamp range control, bi-xenon headlights”, page 87](#)

6 - Gas discharge lamp with integrated ignition coil

- ❑ 42V, 35 W (type D3S)
- ❑ Replace ➔ [“1.11 Removing and installing gas discharge lamp L13 / L14 ”, page 92](#)

7 - Cover

8 - Bolts


- ❑ 1.5 Nm

9 - Cap for turn signal bulb

10 - O-ring

11 - Light bulb for the turn signal light

- ❑ PWY24W
- ❑ Replacing
➔ [“1.4.1 Replacing the PWY24W bulb for turn signal light, halogen and bi-xenon headlights installed up to CW 05/2017”, page 78](#)

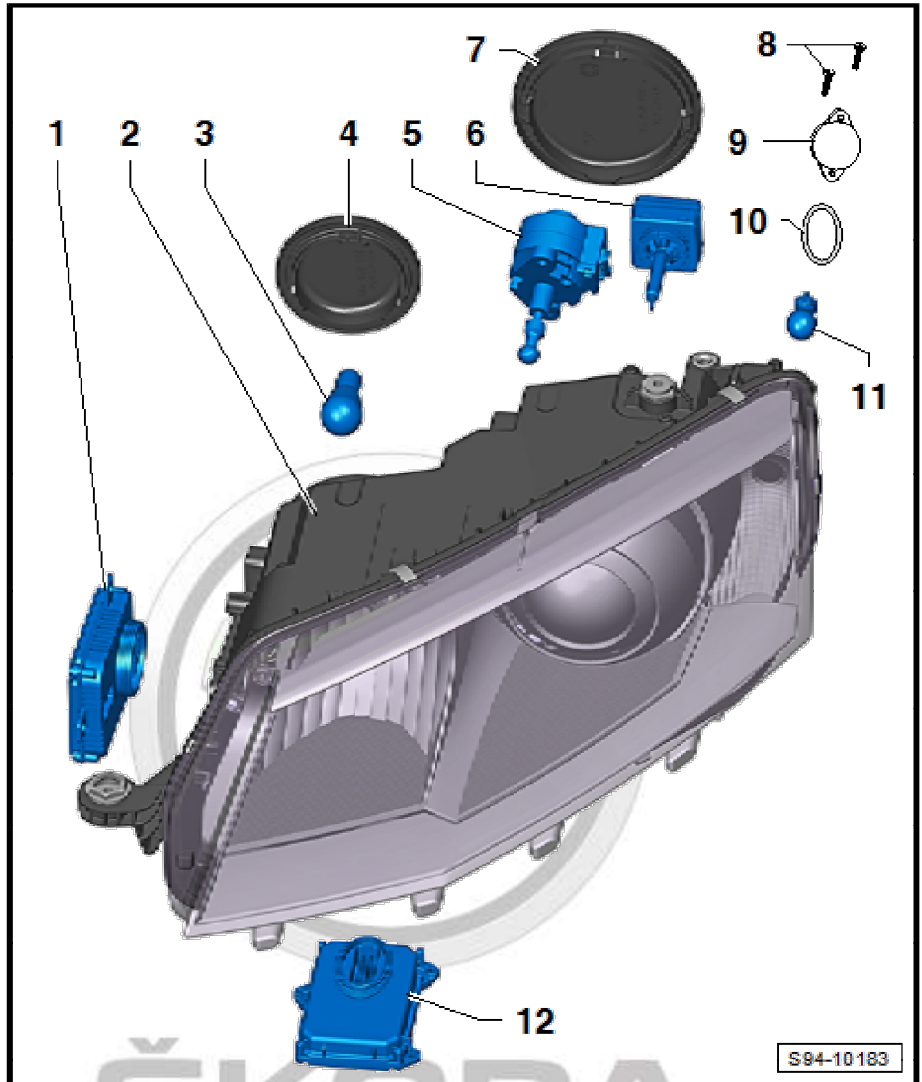

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted without the prior written consent of SKODA AUTO A. S. SKODA AUTO A. S. does not accept any liability with respect to the correctness of information in this document. Copyright by SKODA AUTO A. S.

**12 - Performance module for the headlight - J667- left or -J668- right**

- ❑ Removing and installing
⇒ ["1.15 Removing and installing the performance module for the headlight J667 / J668 ", page 96](#)

1.1.4 Assembly overview – Bi-xenon headlights with LED module**Note**

- ◆ LED module is designed for side light and daytime running light.
- ◆ The LED module is integrated into the headlight housing and cannot be changed separately.
- ◆ The automatic headlight range control, cornering light and the onboard supply control unit are equipped with self-diagnosis that facilitates fault finding of the headlights.
- ◆ For fault finding use the ⇒ Vehicle diagnostic tester in the function "Targeted fault finding".

1 - Control unit for gas discharge lamp - J343- left or - J344- right

- ❑ Removing and installing
⇒ ["1.14 Removing and installing the control unit for a gas discharge lamp J343 / J344 ", page 95](#)

2 - Headlight housing

- ❑ Removing and installing is the same as for the halogen headlight
⇒ ["1.2 Removing and installing headlight", page 77](#)
- ❑ Adjust
⇒ ["1.3 Setting the headlight beam", page 78](#)

3 - Light bulb for additional side light

- ❑ 12V, 5W (W5W BL)
- ❑ Replace
⇒ ["1.12.2 Replacing light bulb for additional side light, bi-xenon headlights", page 94](#)

4 - Cover**5 - Headlight range control motor**

- ❑ Removing and installing
⇒ ["1.8.2 Removing and installing the control motor for headlamp range control, bi-xenon headlights", page 87](#)

6 - Gas discharge lamp with integrated ignition coil

- ❑ 42V, 35 W (type D3S)
- ❑ Replace ⇒ ["1.11 Removing and installing gas discharge lamp L13 / L14 ", page 92](#)

