



## 1.4 Summary of components - tray in headliner

### 1 - Storage area

- ❑ Removing and installing  
⇒ ["1.5 Removing and installing tray in headliner"](#), page 4 .


### 2 - Cover

### 3 - Screw

- ❑ Tightening torque: 1.5 Nm.

### 4 - Front interior light


- ❑ Remove and install ⇒  
Electrical system; Rep. gr. 96 ; Controls; Removing and installing interior light/reading light .

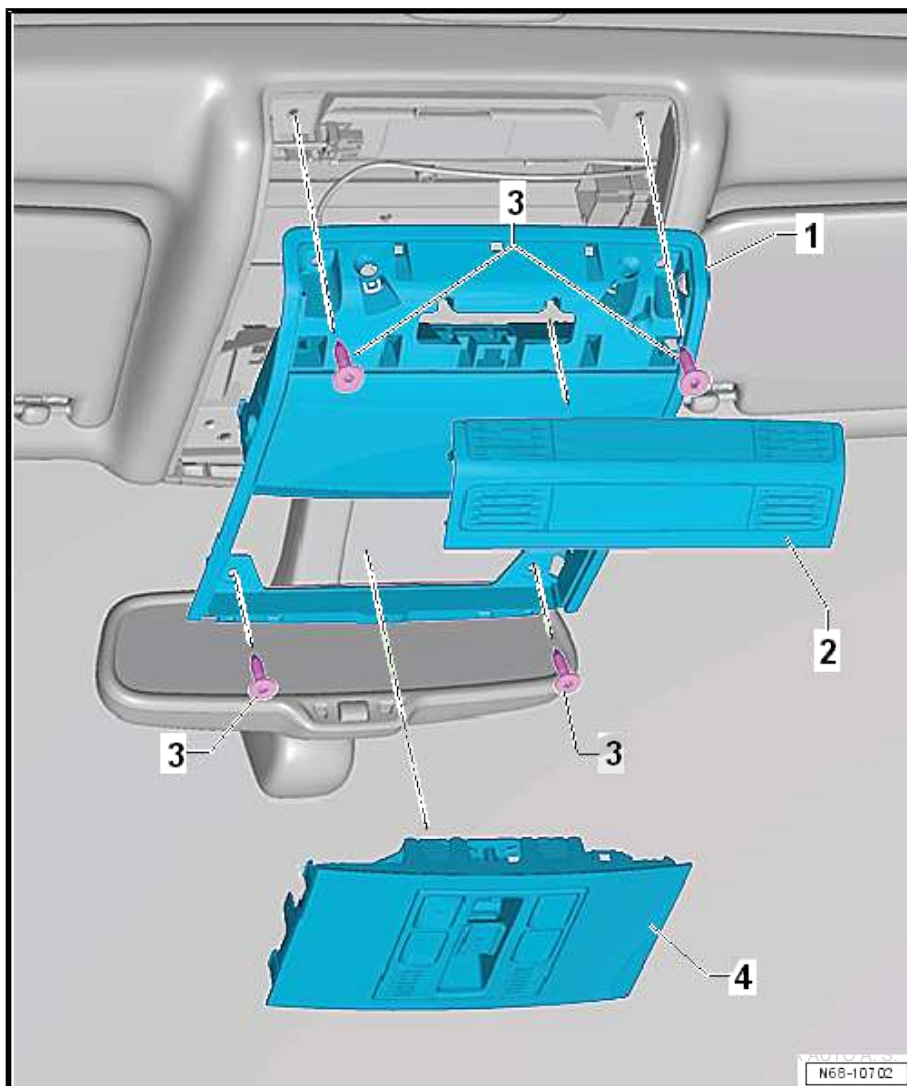

## 1.5 Removing and installing tray in headliner

### Removing

- Switch off the ignition and all electrical components.
- Press cover -1- out of the headliner -3- and remove.
- Remove front interior light with sliding sunroof control unit (depending on equipment) and interior light controls -2- ⇒ Rep. gr. 96 ; Controls; Removing and installing front interior light/reading light .

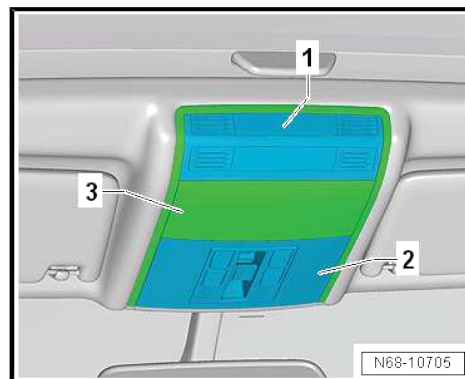



- Unscrew screws -1-.
- Remove tray -2- from the reinforced frame in the headliner -3-.

### Installing




#### Note

*Before installation, check the clip connections for damage and replace if necessary.*

Installation is carried out in the reverse order.

#### Tightening torque:

- ◆ 1.5 Nm

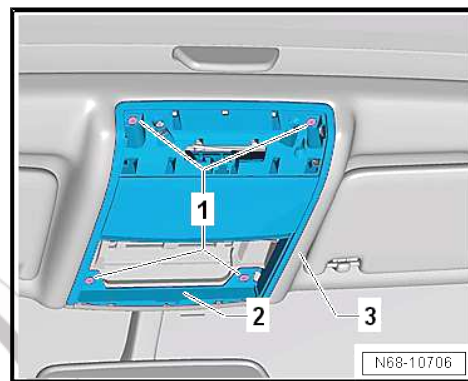

# ŠKODA

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by ŠKODA AUTO A. S. ŠKODA AUTO A. S. does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by ŠKODA AUTO A. S.