

2 Windscreen and rear window wiper system

⇒ [“2.1 Removing and installing the washer fluid reservoir”, page 57](#)

⇒ [“2.2 Removing and installing windscreen washer fluid level sender”, page 58](#)

⇒ [“4.3 Removing and installing washer jet”, page 64](#)

⇒ [“2.4 Removing and installing washer jets”, page 60](#)

⇒ [“2.5 Adjusting spray jets”, page 60](#)

2.1 Removing and installing the washer fluid reservoir

The function of the windscreen washer system can be checked with the ⇒ Vehicle diagnostic tester via the final control diagnosis of the vehicle voltage control unit - J519- .


Removing



Note


Depending on the version, the positions of the individual components and the hose connection can differ slightly from the version in the illustrations. The removal occurs in the same way.

- Switch off the ignition and all electrical components.
- Remove the front left wheelhouse liner ⇒ General body repairs, exterior; Rep. gr. 66 ; Wheelhouse liner; removing and installing front wheelhouse liner .
- Release the plugs from the washer fluid pumps for windscreen -5-, for headlight -2- and from the windscreen washer fluid level sender -4-.
- Expose wiring loom -3-.
- To unlock turn the locking clip on the hose connections -7- (black marking – front windscreen washer) and -6- (white marking – rear windscreen washer) and disconnect the connections from the washer fluid pump. Collect the flowing out washer fluid in a suitable vessel.
- Release washer hose for headlight -1- by pressing the locking clip and detach.
- If necessary, push the washing water pumps for the windscreen washer system and headlight cleaning system out of the washing water tank and upwards out of the rubber bearing.
- Remove the front bumper ⇒ General body repairs, exterior; Rep. gr. 63 ; Front bumper .
- Remove front left headlight
⇒ [“1.2 Removing and installing headlight”, page 77](#) .

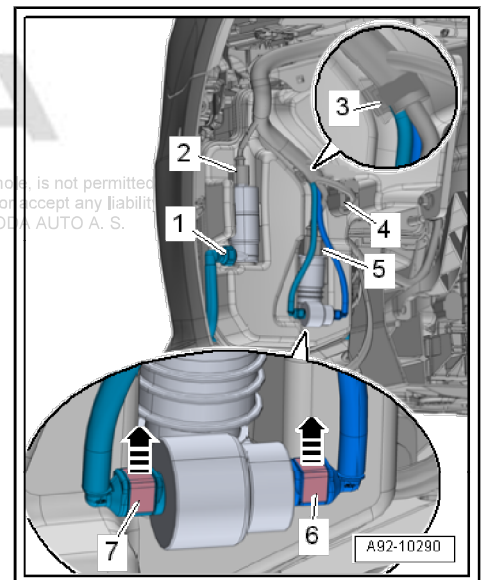




- Remove expansion clip -1- and push filler neck -3- with filler pipe -4- out of the bracket -2-.

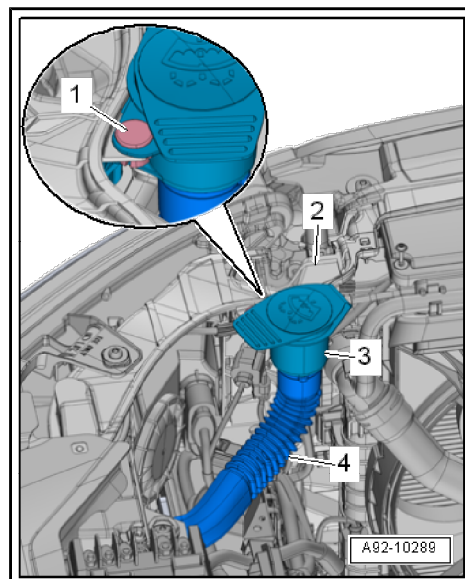

- Unscrew nut -arrow-.

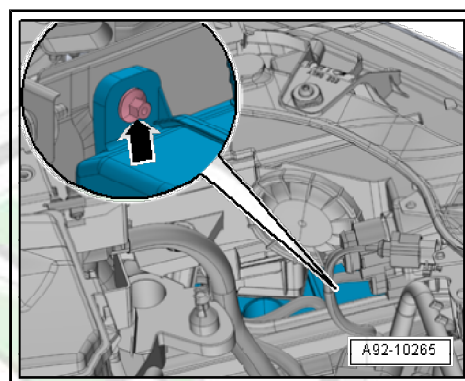

- Release the nuts -1- and -3-.
- Screw out the reservoir -2- from the stud bolts in direction of arrow -A- and lower in direction of arrow -B-.


Installing

Installation is performed in the reverse order; pay attention to the following points:

- Hoses with angled pieces must click audibly into the connections on the washer fluid pumps.
- After completing the assembly work bleed the headlamp cleaning system
⇒ [“5.4 Bleed the headlamp cleaning system”, page 67](#) .

Specified torques

Component	Specified torque
Fixing nuts for reservoir	8 Nm

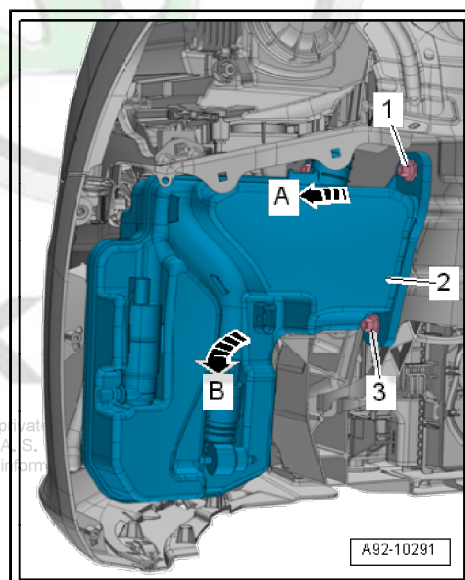

2.2 Removing and installing windscreen washer fluid level sender

Special tools and workshop equipment required

- ♦ Catch pan

Removing




Note

Depending on the version, the positions of the individual components and the hose connection can differ slightly from the version in the illustrations. The removal occurs in the same way.

- Switch off the ignition and all electrical components.
- Remove the front left wheelhouse liner ⇒ General body repairs, exterior; Rep. gr. 66 ; Wheelhouse liner; removing and installing front wheelhouse liner .
- Disconnect plug -3- from Windscreen washer level sensor-2-.
- Place the catch pan underneath the washer fluid reservoir.
- Remove sensor -2- from the container.
- Remove the seal if possible -1-.

Installing

Installation is carried out in the reverse order.

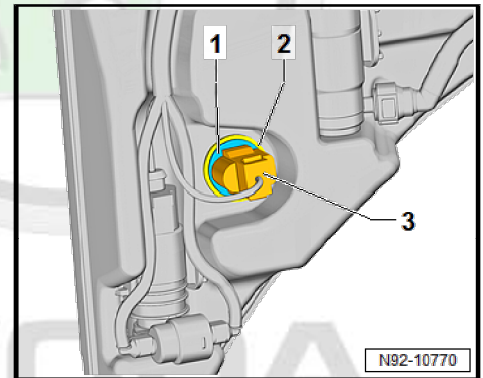

2.3 Removing and installing windscreen washer pump

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by ŠKODA AUTO A. S. ŠKODA AUTO A. S. does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by ŠKODA AUTO A. S.

The function of the windscreen washer system can be checked with the ⇒ Vehicle diagnostic tester via the final control diagnosis of the vehicle voltage control unit - J519- .

Removing



Note

Depending on the version, the positions of the individual components and the hose connection can differ slightly from the version in the illustrations. The removal occurs in the same way.

- Switch off the ignition and all electrical components.
- Remove the front left wheelhouse liner ⇒ General body repairs, exterior; Rep. gr. 66 ; Wheelhouse liner; removing and installing front wheelhouse liner .




- Remove plug from the washing water pumps for disks -5-.
- To unlock turn the locking clip on the hose connections -7- (black marking – front windscreen washer) and -6- (white marking – rear windscreen washer) and disconnect the connections from the washer fluid pump. Collect the flowing out washer fluid in a suitable vessel.
- Push the washing water pumps for the windscreen washer system and headlight cleaning system out of the washing water tank and upwards out of the rubber bearing.

Installing

Installation is performed in the reverse order; pay attention to the following points:

- Hoses with angled pieces must click audibly into the connections on the washer fluid pumps.

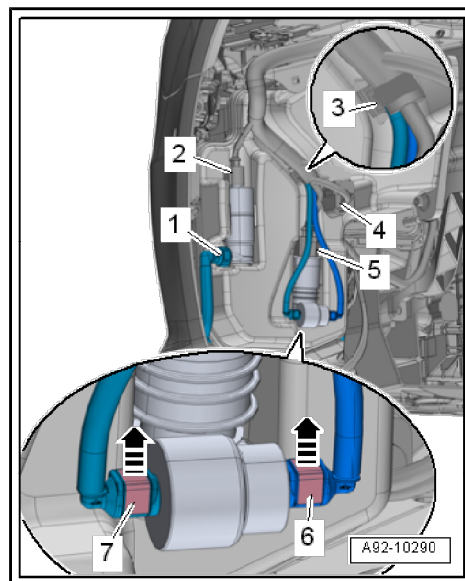


2.4 Removing and installing washer jets

Removing

- Remove windscreen wiper arms
⇒ [“1.2 Removing and installing windscreen wiper arms”, page 49](#) . unless authorised by ŠKODA AUTO A. S., ŠKODA AUTO A. S. does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by ŠKODA AUTO A. S.
- Remove plenum chamber cover ⇒ General body repairs, exterior; Rep. gr. 50 ; Dash panel; installing and removing plenum chamber cover .
- Carefully lever the angled pieces off the spray nozzles from below and disconnect the plug connections (of the heated nozzles).
- Unclip the nozzles from the cooling water tank cover.

Installing

- Perform a functional check or adjust nozzles ⇒ Maintenance ; Booklet Octavia III .

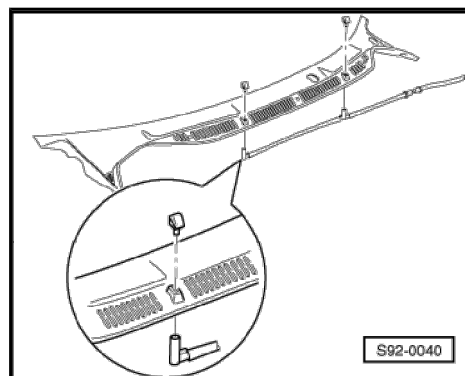

2.5 Adjusting spray jets

Adjusting the spray nozzles⇒ Maintenance ; Booklet Octavia III