



6 Exterior mirrors

⇒ [o6.1 f components - exterior mirror", page 242](#)

⇒ [a6.2 nd installing outside mirror", page 242](#)

⇒ [a6.3 nd installing mirror glass", page 246](#)

⇒ [a6.4 nd installing the mirror adjustment unit", page 247](#)

⇒ [a6.5 nd installing mirror cover", page 248](#)

⇒ [a6.6 nd installing mirror cap", page 249](#)

6.1 Summary of components - exterior mirror

1 - Adjustment unit with motor

- ❑ Removing and installing ⇒ [a6.4 nd installing the mirror adjustment unit", page 247](#) .

2 - Mirror cover - top

- ❑ Removing and installing ⇒ [a6.5 nd installing mirror cover", page 248](#) .

3 - Screw

- ❑ Tightening torque: 1 Nm.

4 - Lighting and turn signal light.

5 - Mirror base support

- ❑ Removing and installing ⇒ [a6.2 nd installing outside mirror", page 242](#) .

6 - Mirror cover - bottom

7 - Screw

- ❑ Tightening torque: 1 Nm.

8 - Mirror cover - bottom


- ❑ Removing and installing ⇒ [a6.5 nd installing mirror cover", page 248](#) .

9 - Mirror glass

- ❑ Removing and installing ⇒ [a6.3 nd installing mirror glass", page 246](#) .


10 - Screw

- ❑ Tightening torque: 1 Nm.

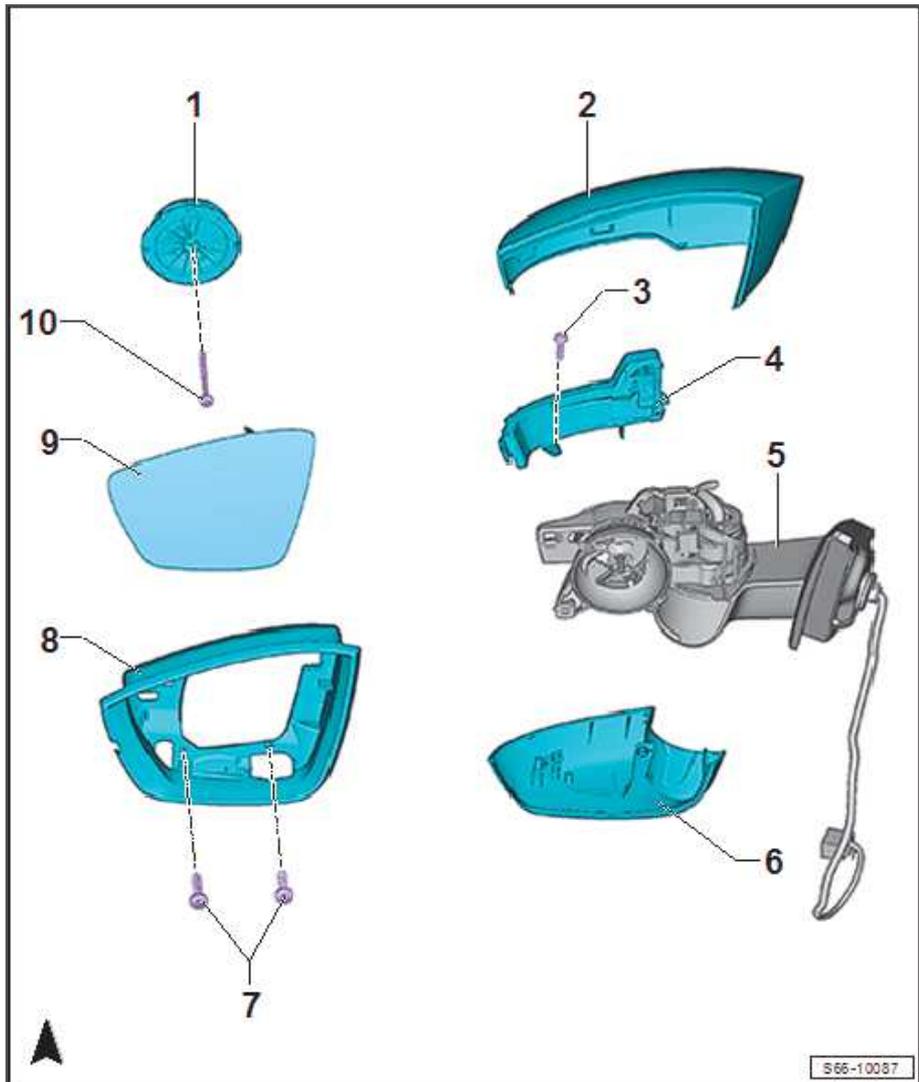


6.2 Removing and installing outside mirror

Removing

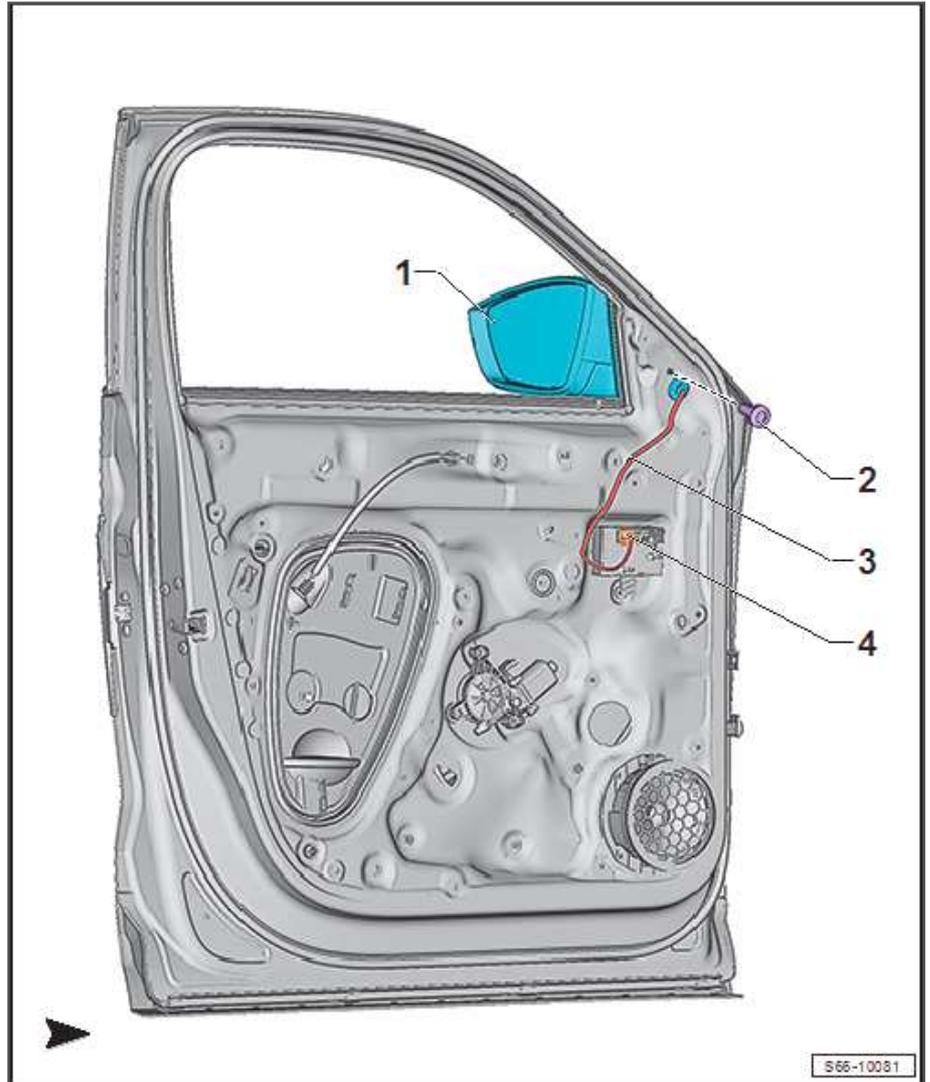


- Remove front door trim ⇒ General body repairs, interior; Rep. gr. 70; Inner lining of the door panel front; removing and installing front door trim.
- Disconnect the plug connection - 4 - of the electrical line - 3 - for the exterior mirror - 1 -.
- Remove screw -2- (15 Nm).

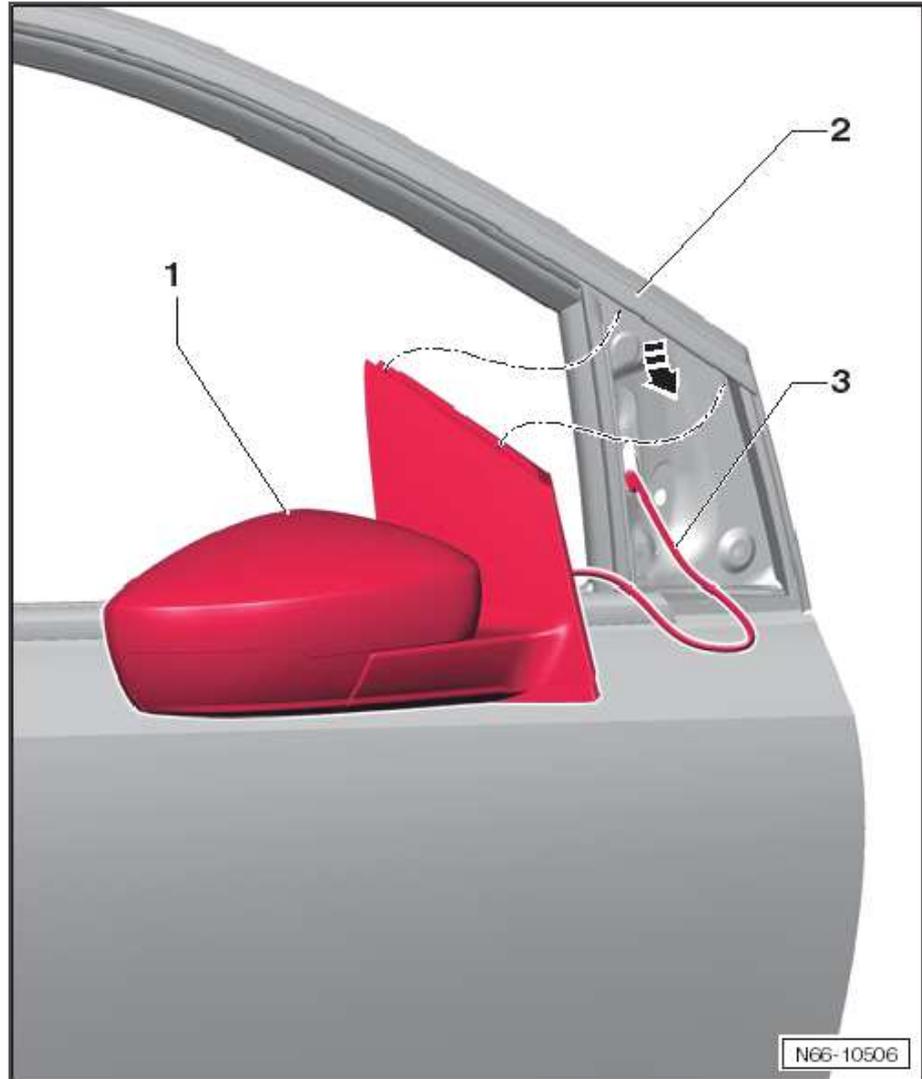


- Swivel out the exterior rear-view mirror - 1 - in the lower area from the door and pull out of the window run - 2 - -arrow-.
- Guide the cable - 3 - through the opening in the door.

Installing

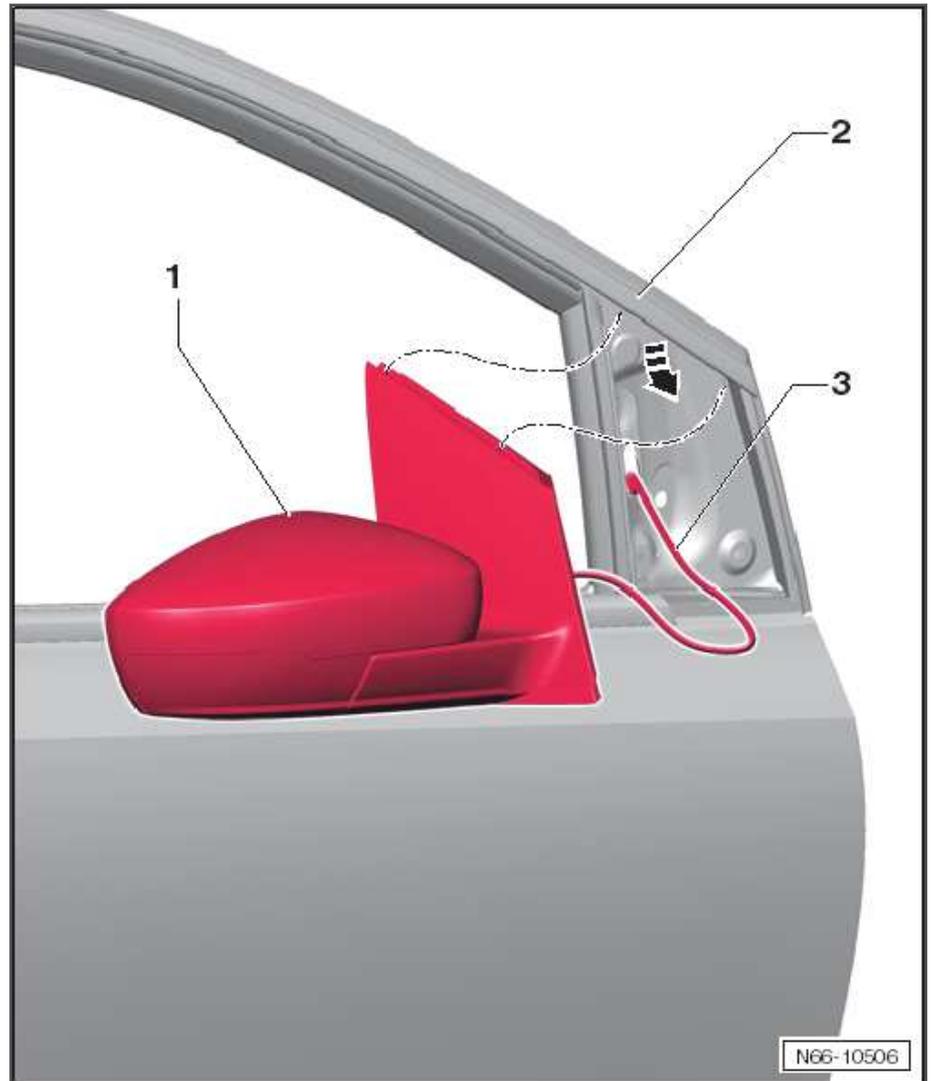

- Guide the electrical cable - 3 - through the opening in the door.
- Insert the exterior mirror - 1 - into the window run - 2 -.

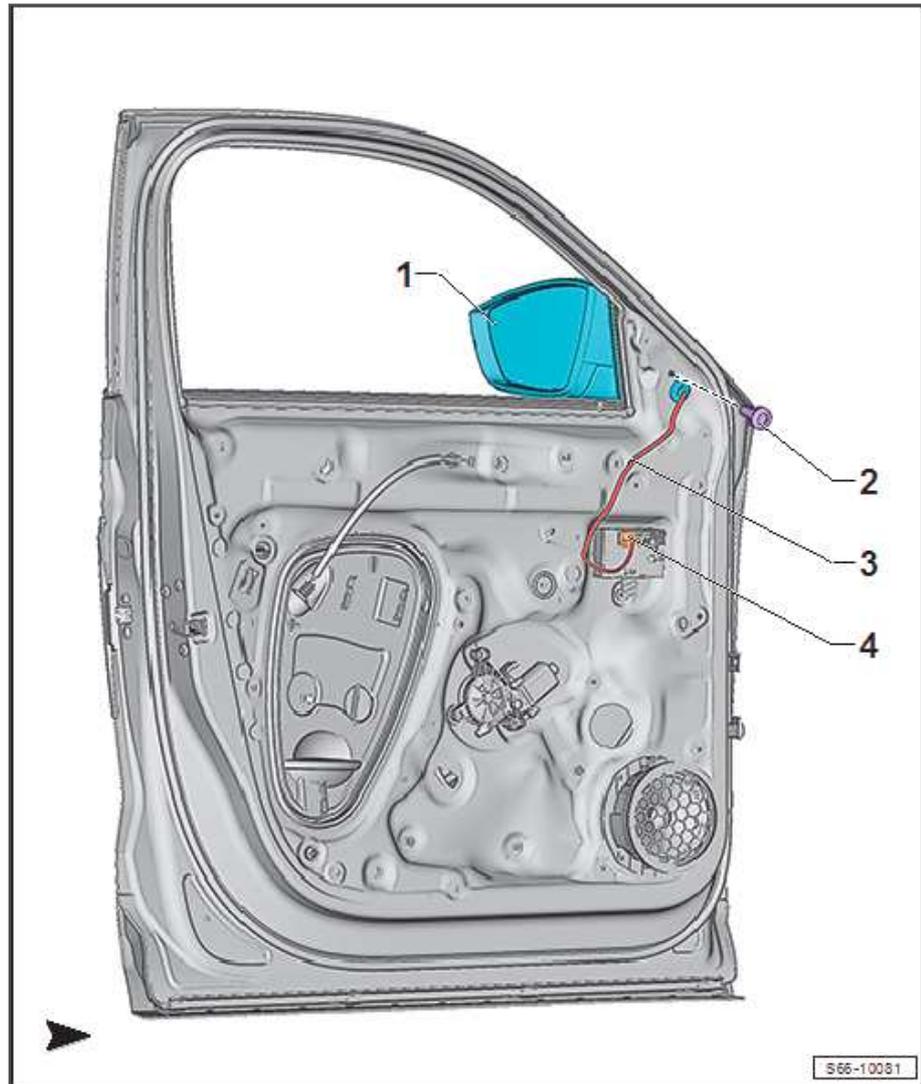


- Fit the screw - 4 - into the mirror housing - 1 -. Tightening torque: 15 Nm.
- Attach el. line - 3 -.
- Connect the plug connection - 2 -.
- A functional check must be performed before installing the door trim panel.

6.3 Removing and installing mirror glass



WARNING

Wear protective gloves and protective goggles when working!

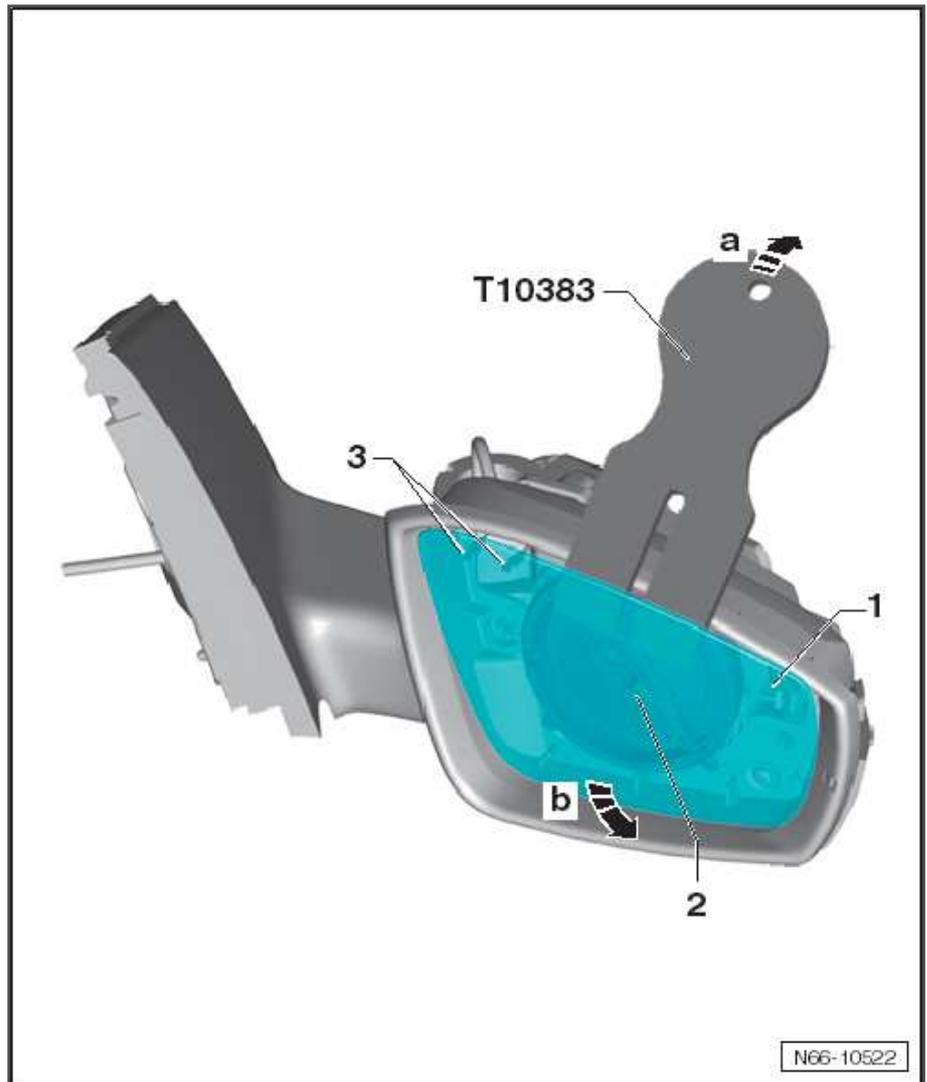

Removing

- Protect the edges of the housing for damage, e.g. cover with textile adhesive tape.
- Swivel the mirror glass - 1 - in the maximum position.
- Press off the mirror glass -1- from the holder -2- and the housing -arrow a- for example using a wide plastic wedge.
- Remove the mirror glass in -direction of arrow B-.
- Remove connector for heating - 3 -.


Installing

- Press the mirror glass in the centre onto the holder in the housing.

The mirror glass clicks audibly into place.

- Subsequently perform a functional test.

6.4 Removing and installing the mirror adjustment unit

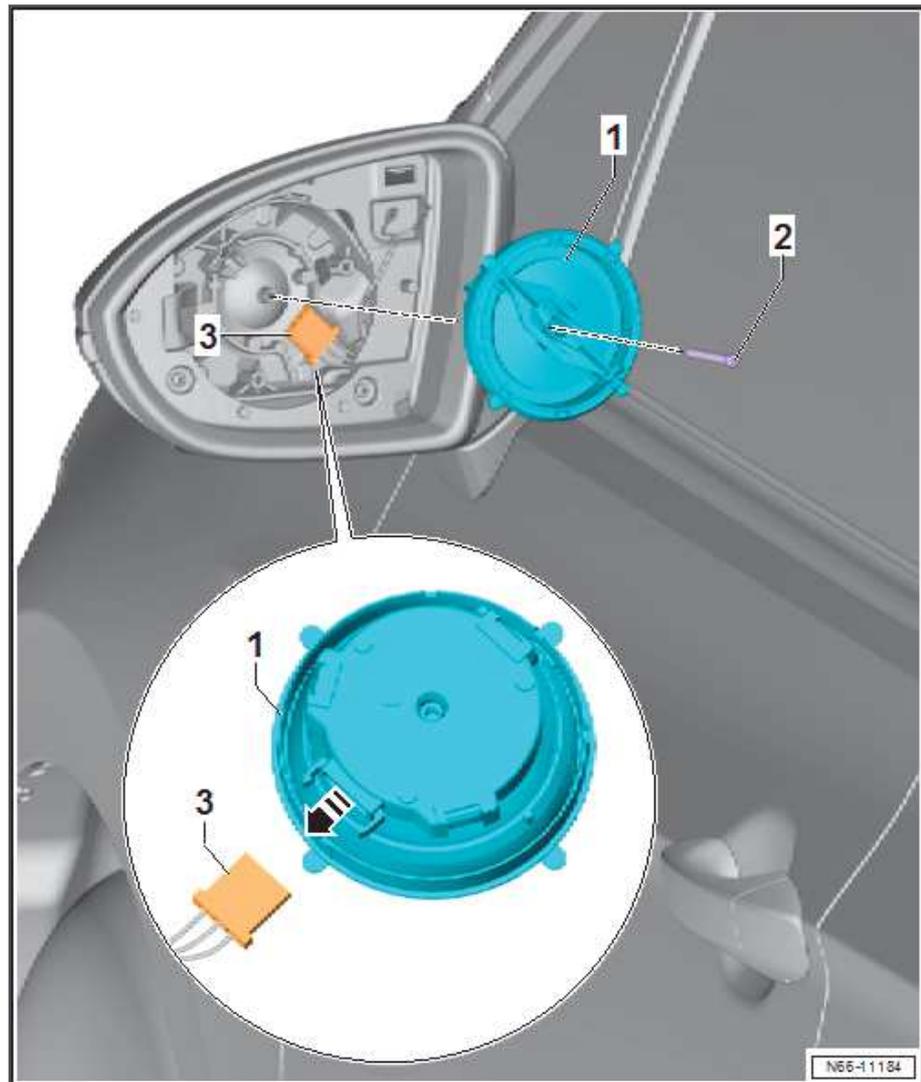

Removing


- Remove mirror glass ⇒ [a6.3 nd installing mirror glass”, page 246](#) .
- Unscrew screw -2-.
- Swivel the adjustment unit with motor -1- to the side and disconnect the plug -3-.

Installing

The installation occurs in reverse order.

- A functional check must be performed before installing the mirror glass.

6.5 Removing and installing mirror cover

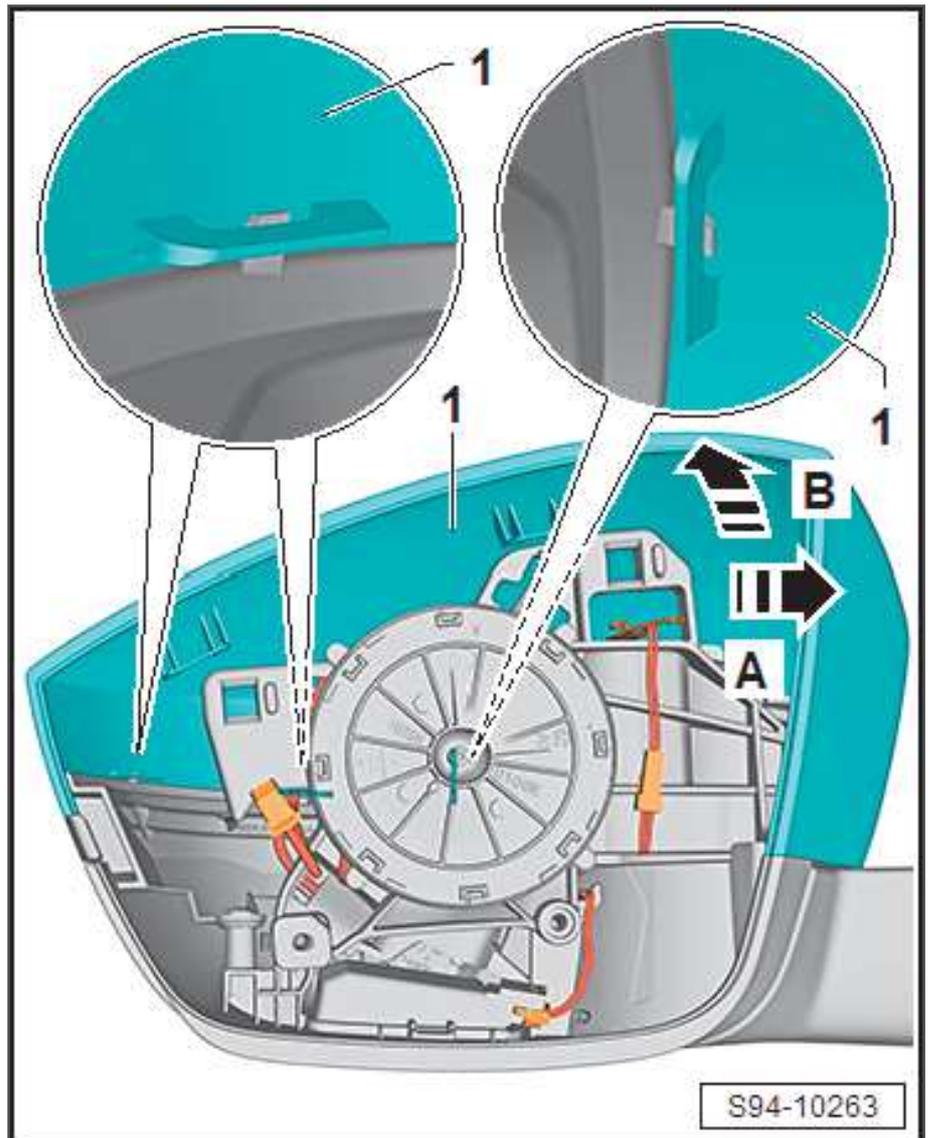

Removing

- Remove mirror cap ⇒ [a6.6 nd installing mirror cap”, page 249](#) .
- Move the cover -1- in the direction of arrow -A- lightly and then remove in the direction of arrow -B-.


Installing

- Fit mirror cover -1- and push into the retaining tabs until it audibly clicks into place.

6.6 Removing and installing mirror cap

Removing

- Remove mirror glass ⇒ [a6.3 nd installing mirror glass”, page 246](#) .
- Unscrew screws -2-.
- Detach and remove cover -1- from the retaining tabs, arrows -A- and -B-.

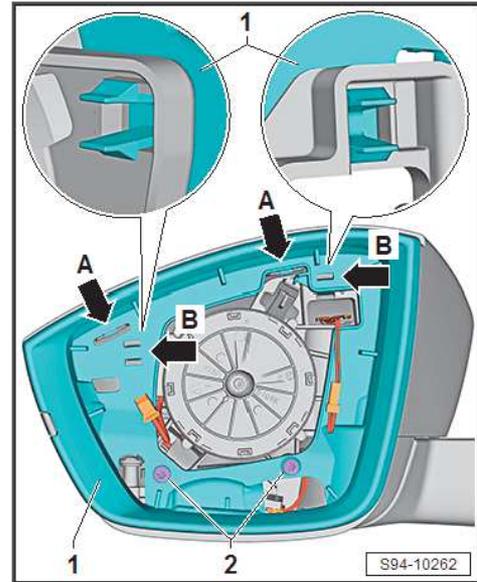

Installing

The installation occurs in reverse order.