




- Unhook backrest from the middle positions -arrow A-.
- Remove seat backrest from pin bolts arrow - B -.

Vehicles with rear seat heating

- Pull out the plug for the seat heating.

Installing

- Installation is carried out in the reverse order.

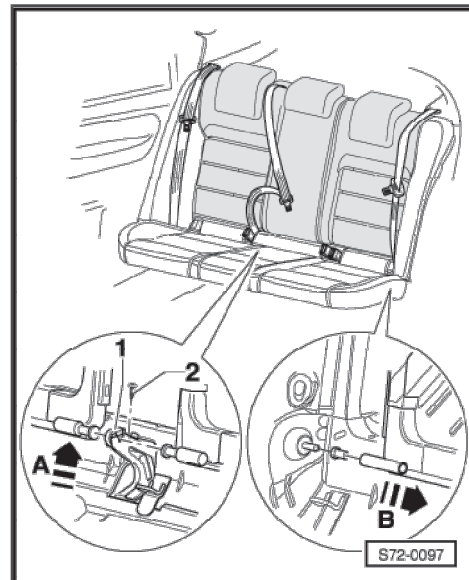


2.3 Removing and installing the lock for the rear seat backrest

2.3.1 Removing and installing the lock for the rear seat backrest

ŠKODA

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by ŠKODA AUTO A. S. ŠKODA AUTO A. S. does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by ŠKODA AUTO A. S.

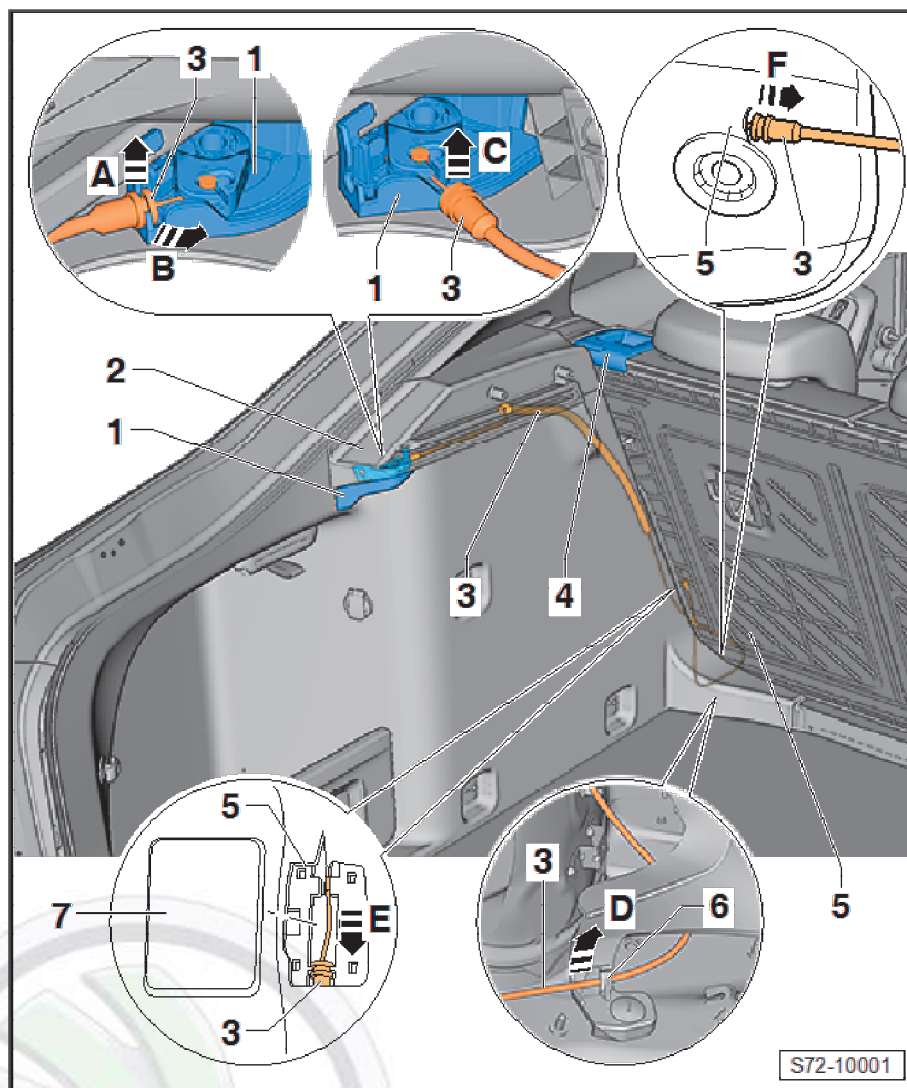

Remove - Unlock in the upper part of the side luggage compartment trim panel

- Remove the rear storage shelf holder
⇒ [“6.5 Removing and installing the rear window shelf pad”](#), page 144 .
- Remove Bowden wire - 3 - from operating lever of mounting bracket - 1 - in direction of arrow - A -.
- Turn in the direction of the arrow - B -.
- Unhook the cable from the holder in the direction of the arrow - C -.
- If the Bowden wire - 3 - is removed, unclip from the mounting - 6 - in the direction of the arrow - D - and thread through the opening in the trim panel - 5 - in the direction of arrow - F -.

Installing Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by ŠKODA AUTO A. S. ŠKODA AUTO A. S. does not guarantee or accept any liability for the use of the information provided. Copyright by ŠKODA AUTO A. S.

- Installation is carried out in the reverse order.

Removal - unlocking in the seat backrest


- Removing the rear seat bench
⇒ [“2.2 Removing and installing backrests”](#), page 194 .
- Remove the cover - 7 - on the seat rest - 5 -.

- Unhook the control cable from the operating lever in direction of arrow - E -.
- Pull the Bowden wire out of the armrest.

Installing

- Installation is carried out in the reverse order.

2.3.2 Removing and installing the rear seat backrest release (Octavia III - Combi)

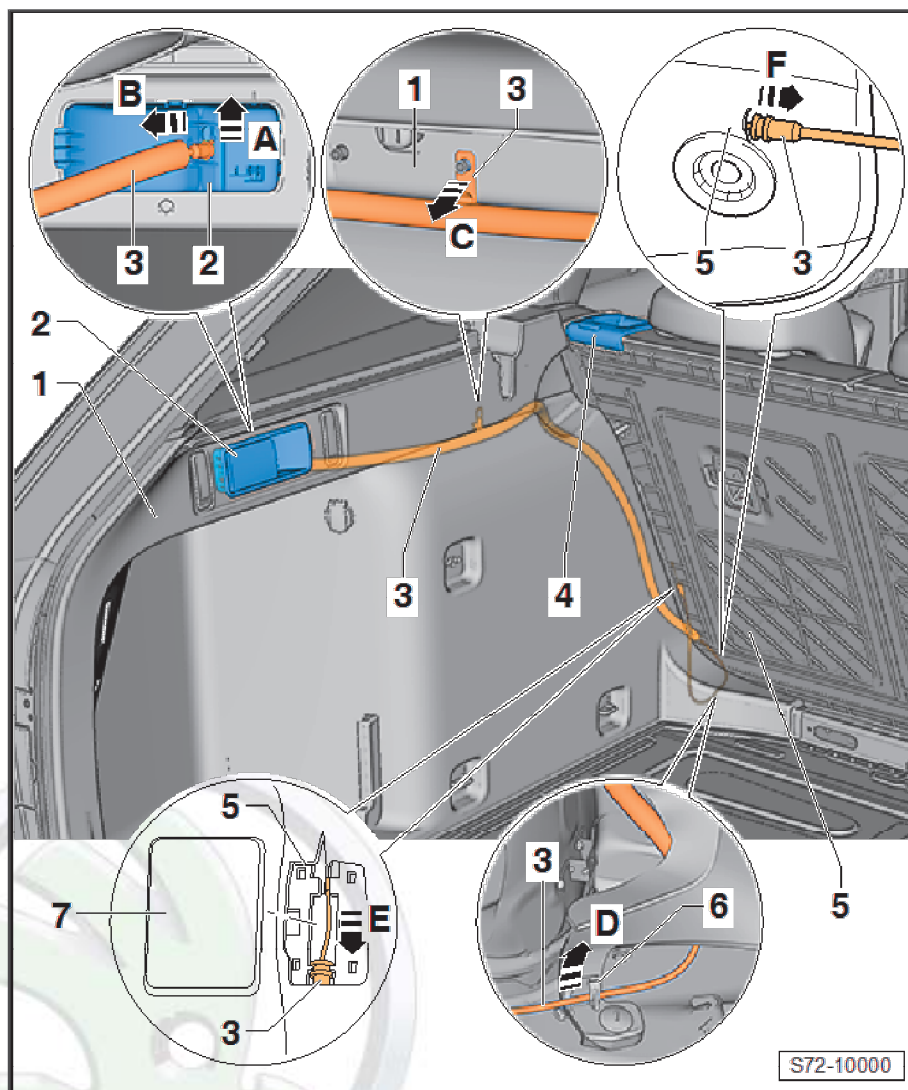

Remove - Unlock in the upper part of the side luggage compartment trim panel

- Remove the rear storage shelf holder
⇒ ["6.5 Removing and installing the rear window shelf pad", page 144](#).
- Remove Bowden wire - 3 - from operating lever of mounting bracket - 2 - in direction of arrow - A -.
- Unhook the control cable from the operating lever of the holder and pull out in the direction of arrow - B -.
- If the Bowden wire - 3 - is removed, unclip from the mounting - 6 - in direction of arrow - D -, from the mounting - 3 - in direction of arrow - C - and thread through the opening in the trim - 5 - in direction of arrow - F -.



Installing

- Installation is carried out in the reverse order.

Removal - unlocking in the seat backrest

- Removing the rear seat bench
⇒ [“2.2 Removing and installing backrests”, page 194](#) .
- Remove the cover - 7 - on the seat rest - 5 -.
- Unhook the control cable from the operating lever in direction of arrow - E -.
- Pull the Bowden wire out of the armrest.

Installing

- Installation is carried out in the reverse order.

2.3.3 Removing and installing the actuator for remote release of the backrest




Note

Removal and installation only applies to the left side of the vehicle. The same applies for the removing and installing on the right vehicle side.

Removing

ŠKODA

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by ŠKODA AUTO A. S. ŠKODA AUTO A. S. does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by ŠKODA AUTO A. S.

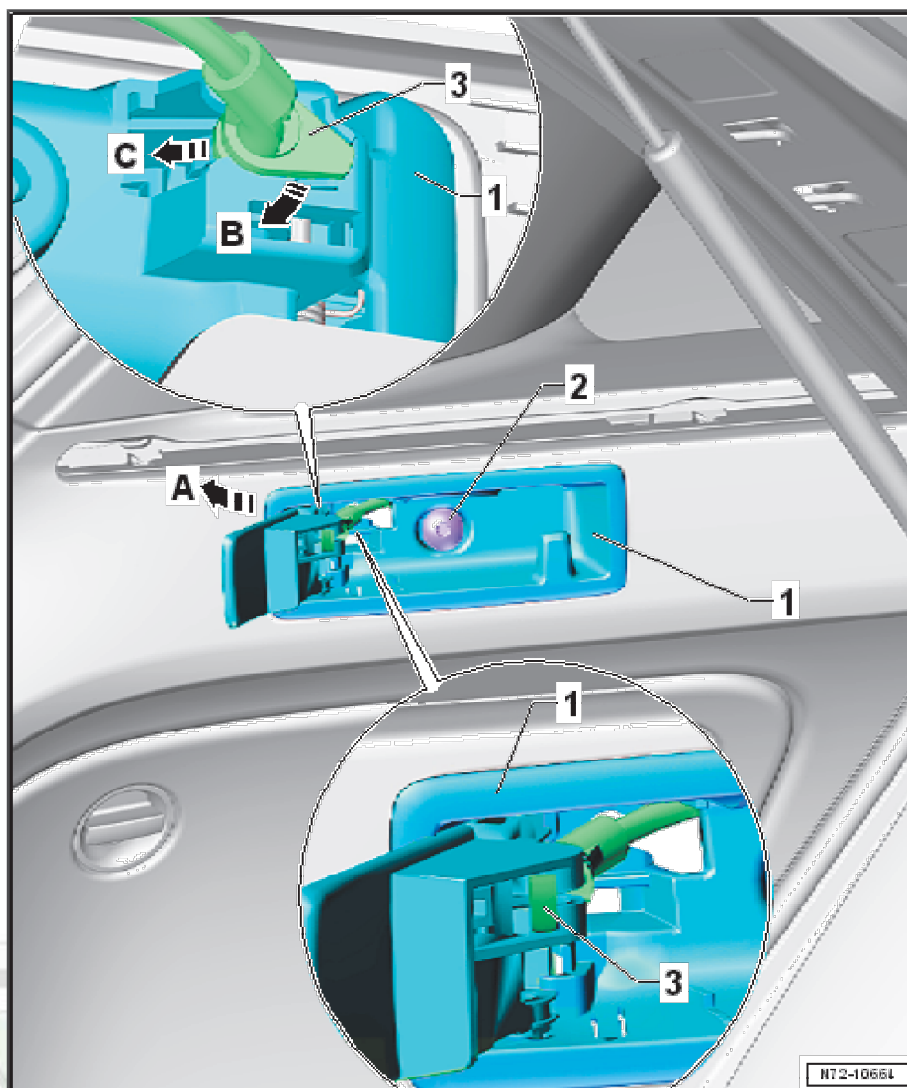

- Pull the handle of the actuator for remote release of the backrest - 1 - and keep pulled out.
- Unscrew screw -2-.
- Push the actuator for remote release of the backrest - 1 - out of the luggage compartment side trim and swing out - Arrow A -.
- Release the abutment for the cable - 3 - - Arrow B -.
- Push the cable - 3 - out of the abutment of the actuator for remote release of the backrest - 1 - - Arrow C -.
- Unhook the bolt for the cable - 3 - from the handle of the actuator for remote release of the backrest - 1 -.
- Remove the actuator for remote unlocking of the backrest.

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by ŠKODA AUTO A. S. ŠKODA AUTO A. S. does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by ŠKODA AUTO A. S.



Installing

Installation is carried out in the reverse order. When installing, observe the following:




Note

Ensure correct positioning of the abutment for the cable - 2 - in the guide lugs of the actuator for remote release of the backrest - 1 -.

Tightening torque

◆ 7 Nm.

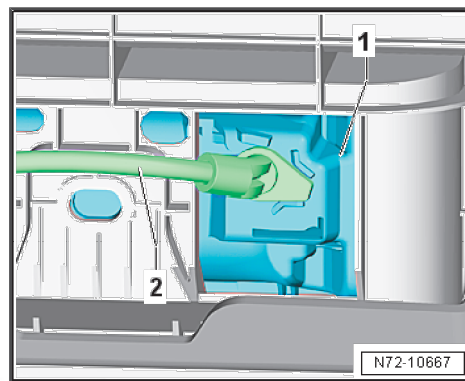

2.3.4 Removing and installing the cable for remote release of the backrest



Note

Removal and installation only applies to the left side of the vehicle. The same applies for the removing and installing on the right vehicle side.


Removing

Cable on the backrest side

- Remove the rear seat backrests
⇒ [“2.2 Removing and installing backrests”, page 194](#).

ŠKODA

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by ŠKODA AUTO A. S. ŠKODA AUTO A. S. does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by ŠKODA AUTO A. S.

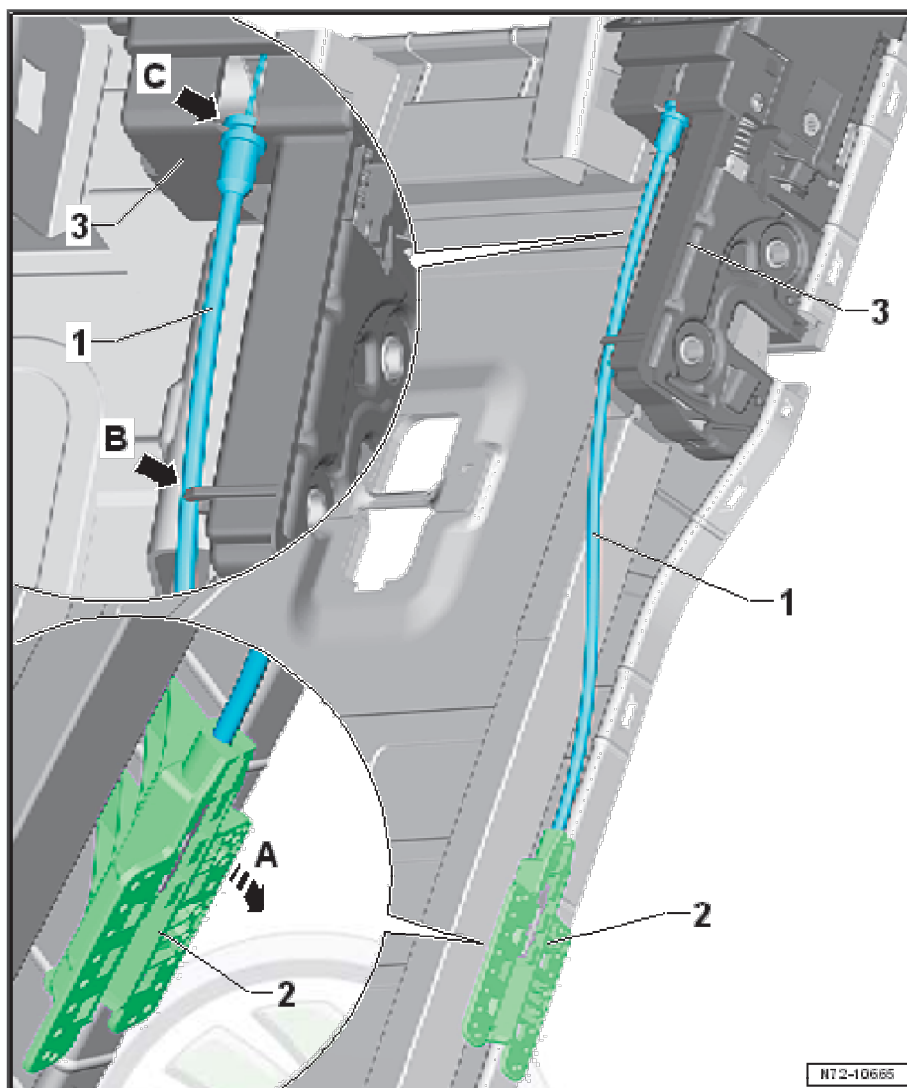

- Release the cover and backrest upholstery only in the cable area - 1 -.
- Push the connecting part - 2 - out of the backrest frame with the cable - 1 - - Arrow A -.
- Push the cable -1- out of the mounting - Arrow b -.
- Push the cable - 1 - out of the abutment - Arrow C - of the rear seat backrest catch - 3 -.
- Unhook the bolt for the cable - 1 - from the rear seat backrest catch - 3 - and remove the cable - 1 -.

ŠKODA

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by ŠKODA AUTO A. S. ŠKODA AUTO A. S. does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by ŠKODA AUTO A. S.




Cable on the vehicle side

- Remove the luggage compartment side trim panel
⇒ [“6.6 Removing and installing luggage compartment side trim panel”, page 145](#) .
- Remove the actuator for remote release of the backrest
⇒ [“2.3.3 Removing and installing the actuator for remote release of the backrest”, page 198](#) .
- Push the cable - 1 - out of the holders - 2 - on the luggage compartment side trim panel and remove.

Installing

Installation is carried out in the reverse order.

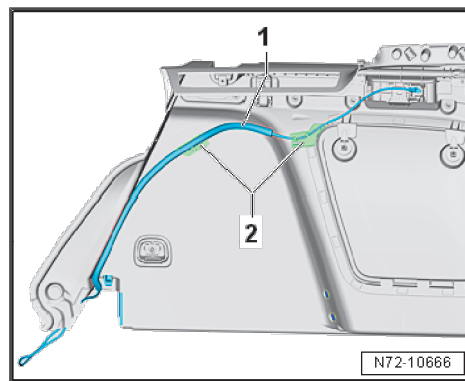

ŠKODA

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by ŠKODA AUTO A. S. ŠKODA AUTO A. S. does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by ŠKODA AUTO A. S.