





Removing

- Switch off the ignition and all electrical consumers!
- Attach a strip of commercially available adhesive tape -1- to the area of the rear lid above the bulb for the additional brake light.

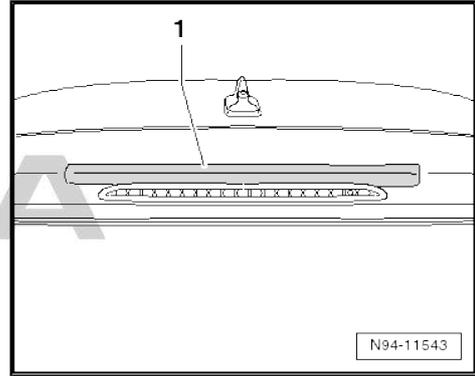

- Insert the assembly wedge - T10383- (vehicles with glued spoiler, use plastic spatula) -1- in stages from the top right corner between bulb for additional brake light - M25- -2- and rear lid.

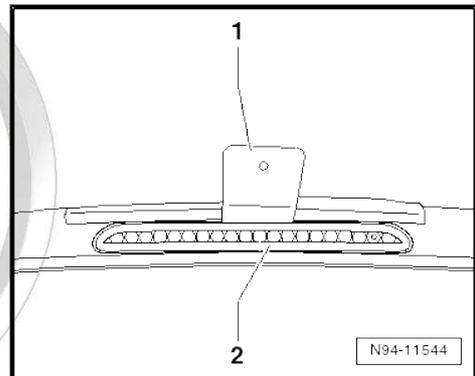

- Release the catches of the bulb for additional brake light - M25- successively by pushing the assembly wedge in direction of travel. **Work from right to left.**
- Pull light out of tailgate, taking connected wire lengths into account.

