

- Unlock and disconnect hose connection -1-.
- Unlock and disconnect plug connection -2- and remove light.

Installing


Installation is performed in the reverse order, pay attention to the following points:



Note

When installing the additional brake light bulb - M25-, ensure the seal is seated correctly. Make sure that the seal is undamaged and that no loops are formed.

- Mount plug.
- Connect hose connection for spray jet. Ensure correct locking by pulling slightly on the connection.
- Press lamp for high level brake light, starting from the bottom edge, into the assembly opening until it audibly locks into place.
- Check the function of the lamp for high level brake light - M25- and of the rear window spray nozzle.

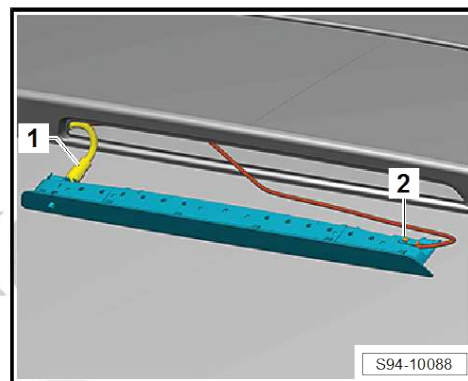

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by ŠKODA AUTO A. S. ŠKODA AUTO A. S. does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by ŠKODA AUTO A. S.