

2 Rear seats


⇒ [“2.1 Removing and installing the rear seat bench / individual seats”, page 106](#) .

⇒ [“2.2 Removing and installing backrests”, page 106](#) .


2.1 Removing and installing the rear seat bench / individual seats

Removing

- Fold the seat bench - 1 - in the -direction of arrow-.

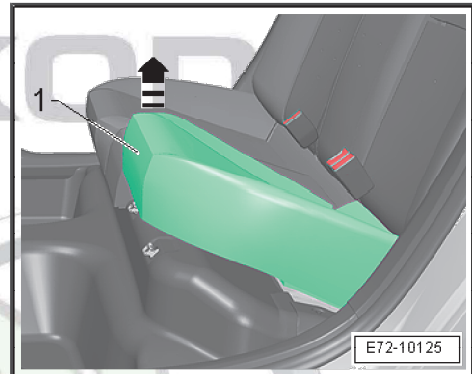


- Swivel the seat bench in the -direction of arrow-.
- Push the spring bracket -2- inwards out of the supports -3-.
- Remove seat from vehicle.

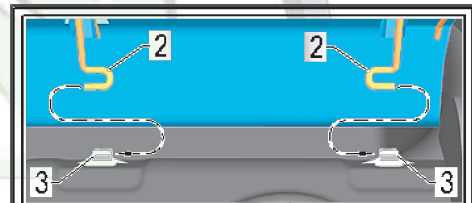

Installing

- The installation occurs in reverse order.

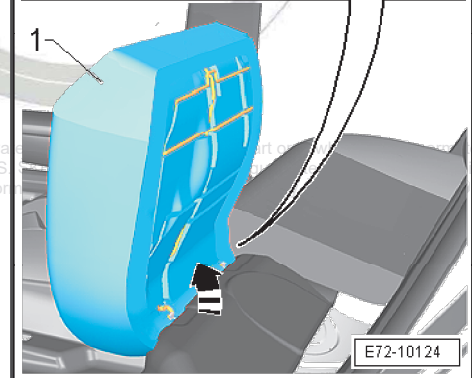


2.2 Removing and installing backrests

Removing

- Remove deflection fitting below for the middle safety belt.
- Unlock both backrest parts and fold over.
- Remove cap for clamp.


- Release the screw -1- (9 Nm) and remove the clamp -3- from the support -2-.

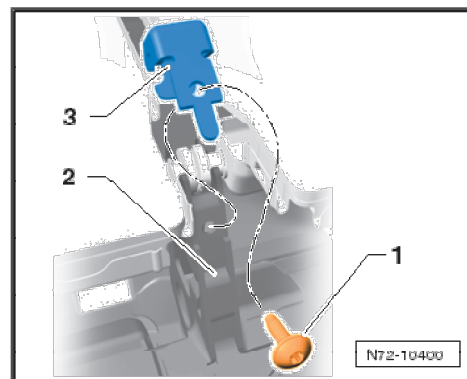

- Unhook backrest from the centre retainers arrow -A-.
- Remove seat backrest from pin bolts arrow - B -.

Installing

- The installation occurs in reverse order.

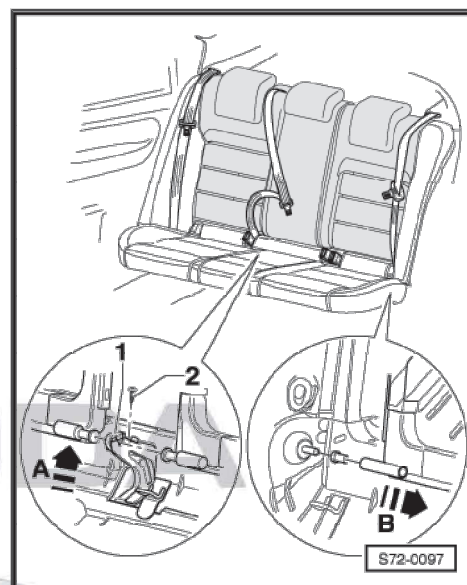

ŠKODA



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by ŠKODA AUTO A. S. ŠKODA AUTO A. S. does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by ŠKODA AUTO A. S. ©